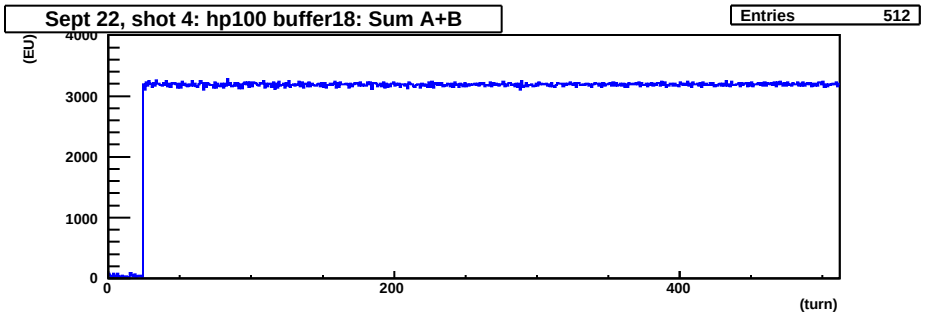

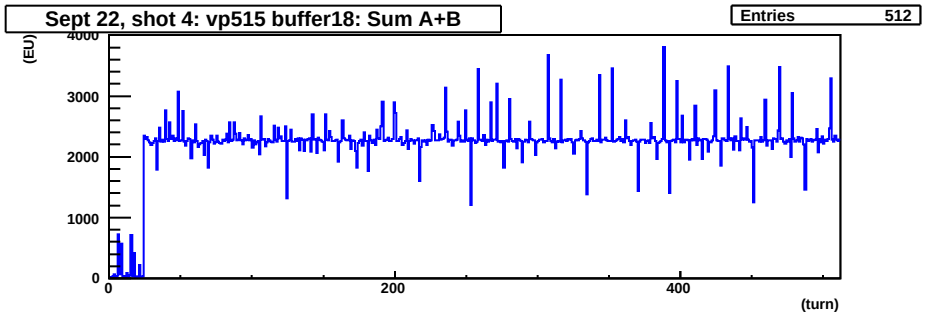

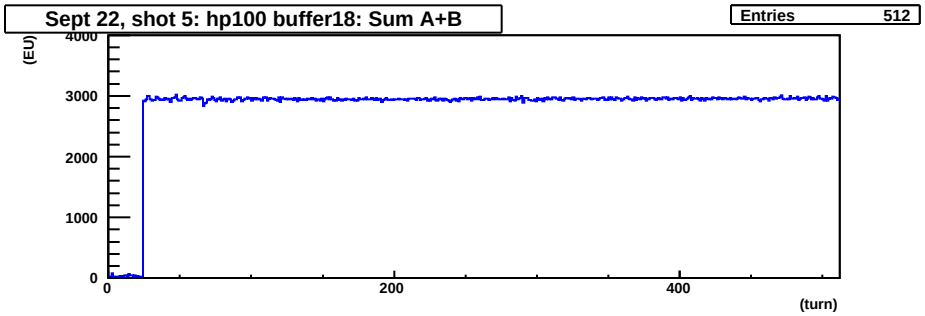

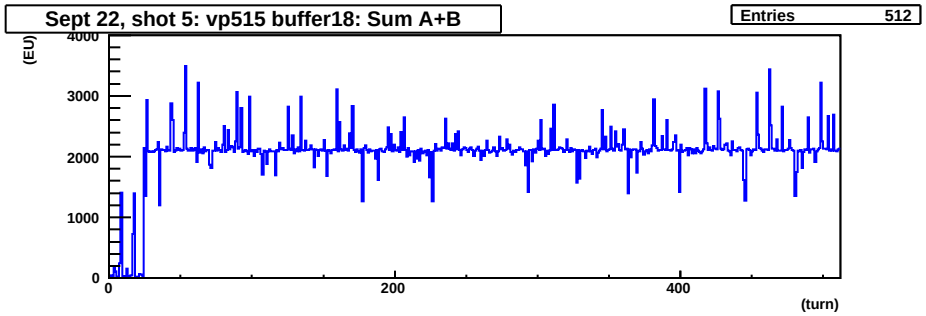

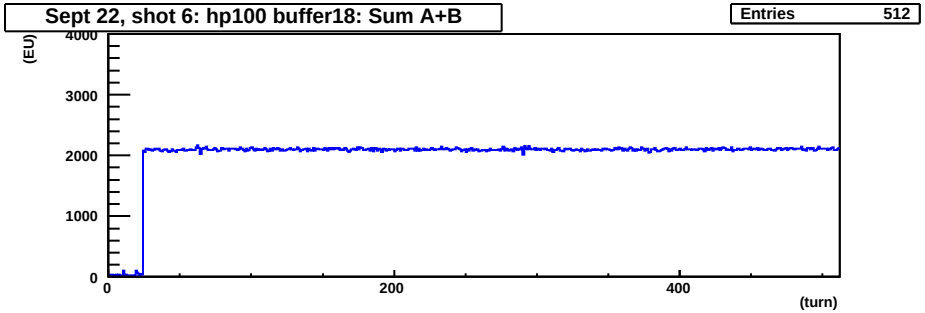

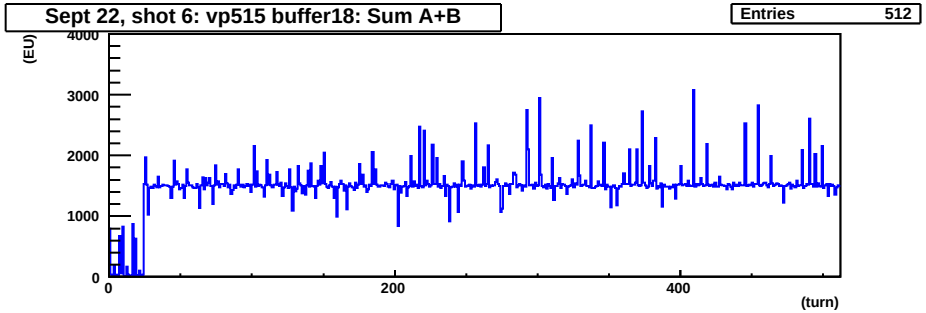

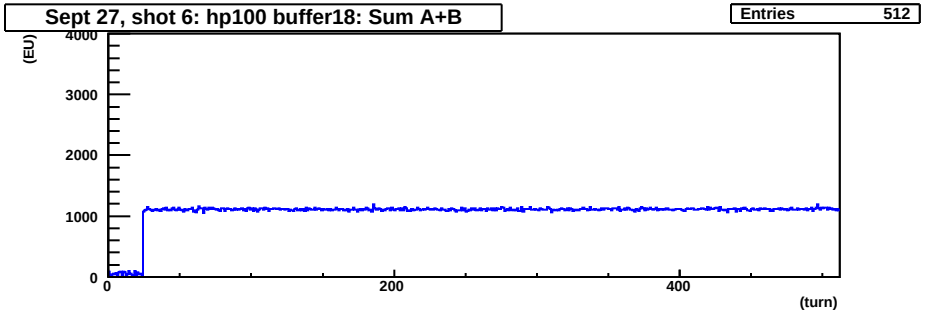

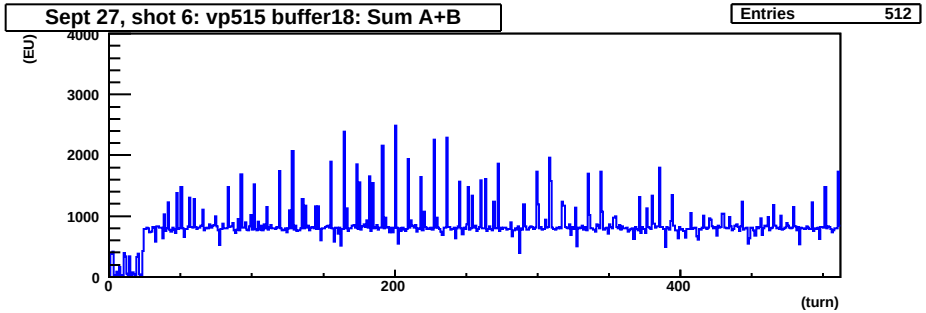

State 20. Four examples each of clean and noisy injection turn by turn data.

09/29/2006 15:01

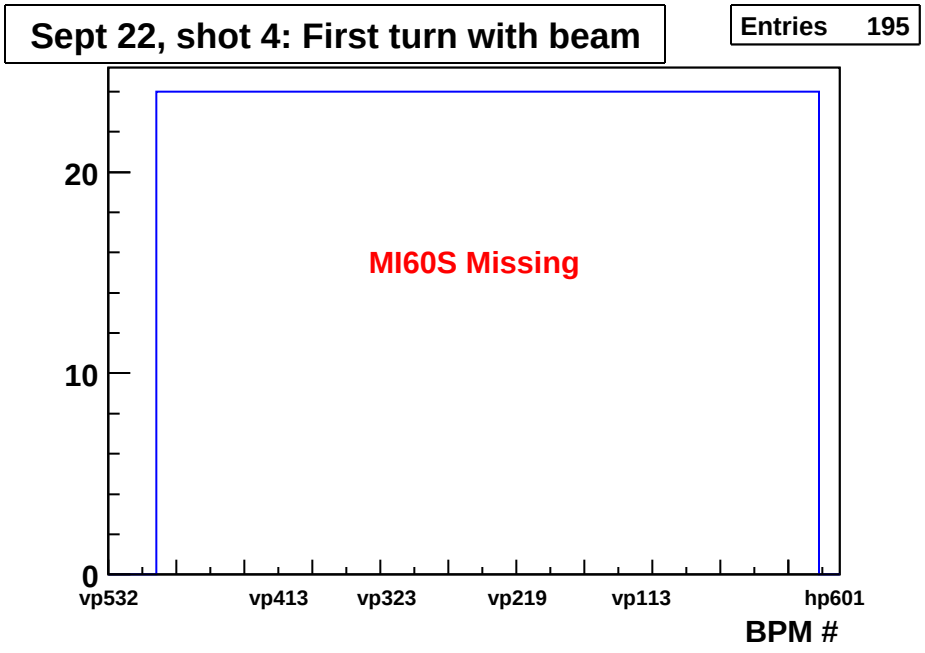

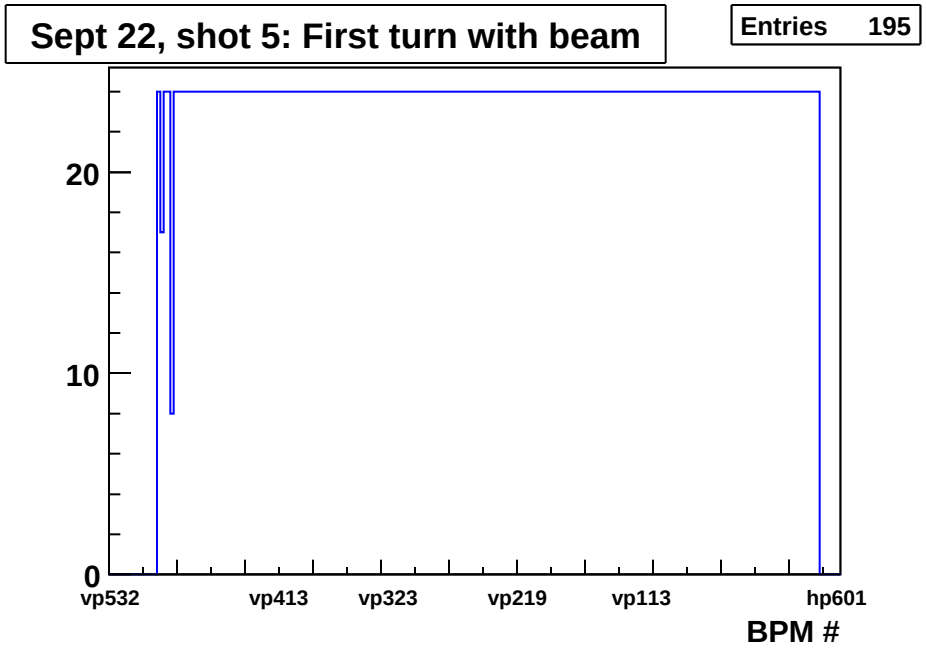

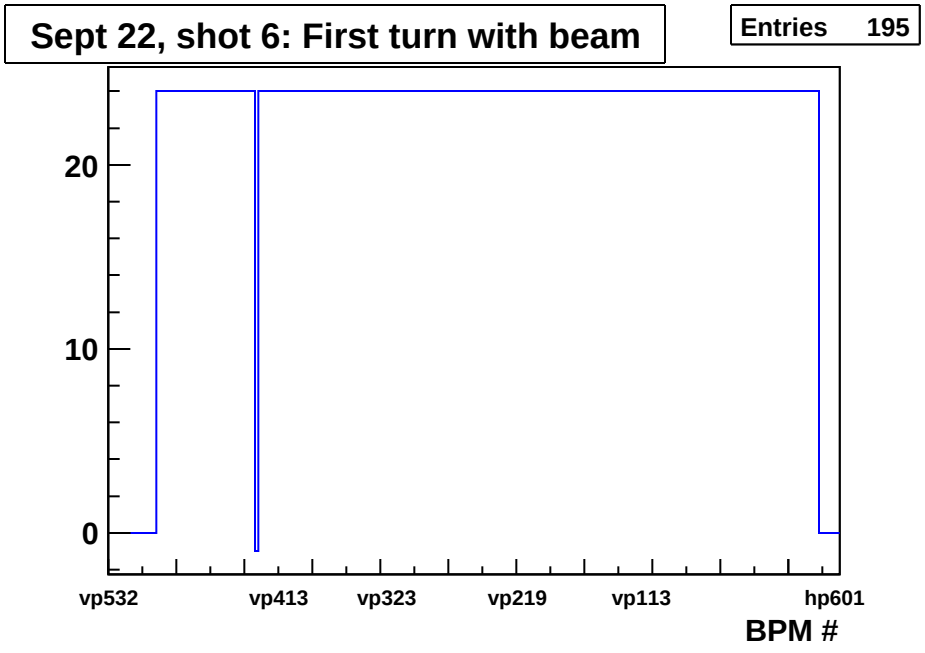

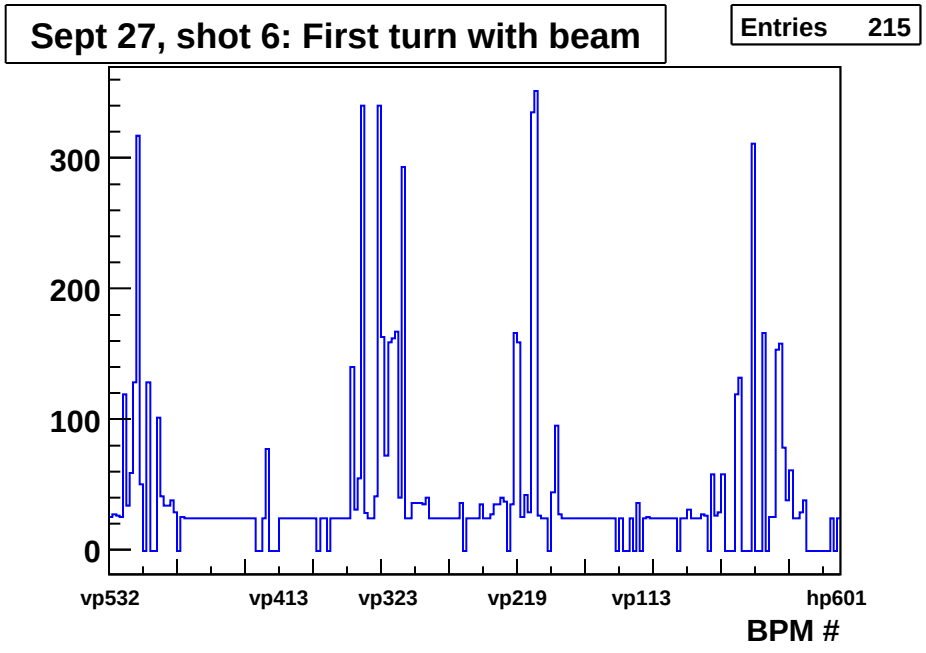

State 20 Injection. First turn over threshold.

09/29/2006 15:01

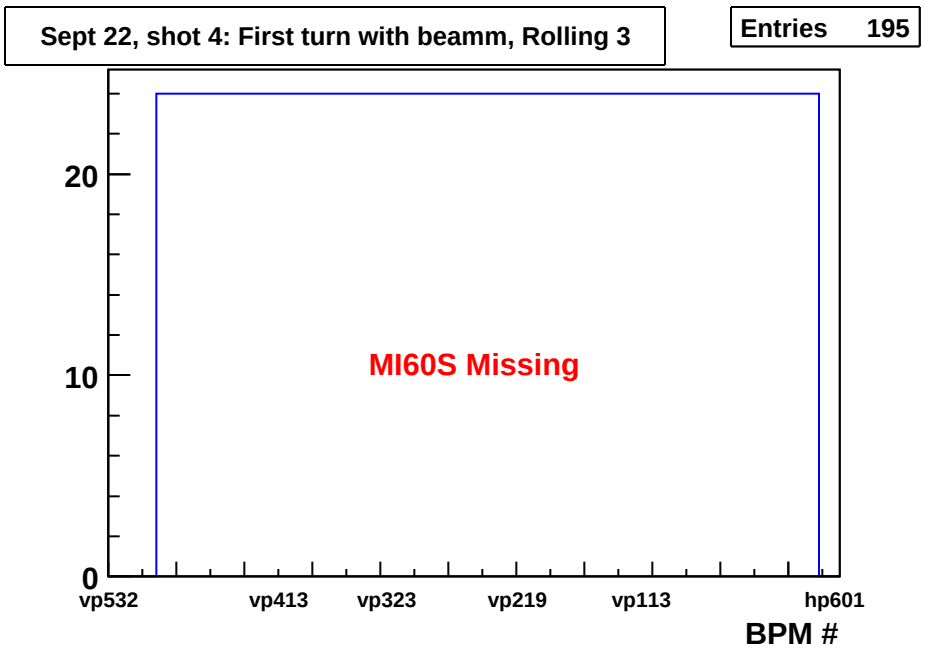

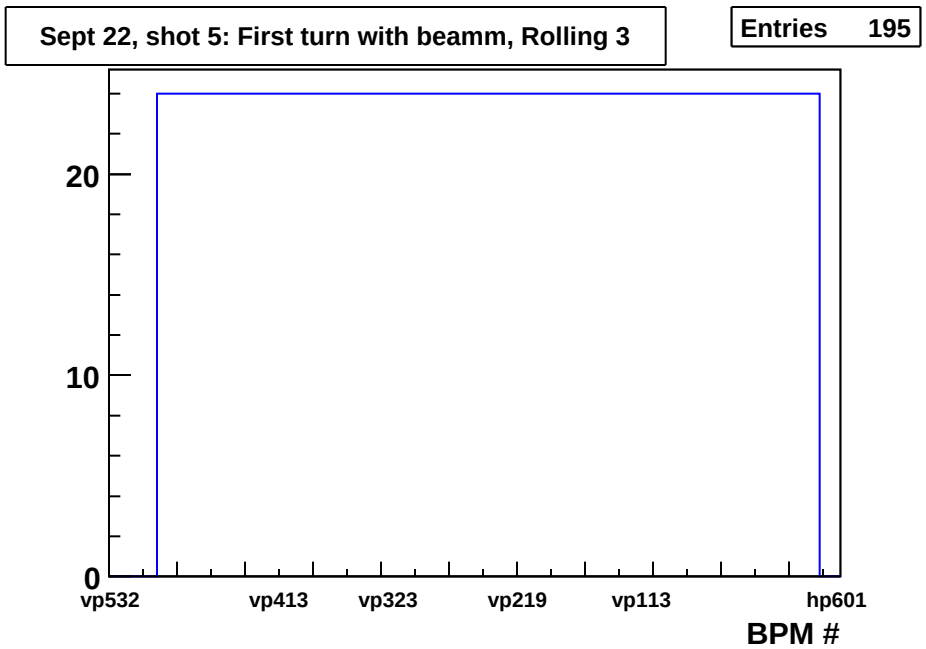

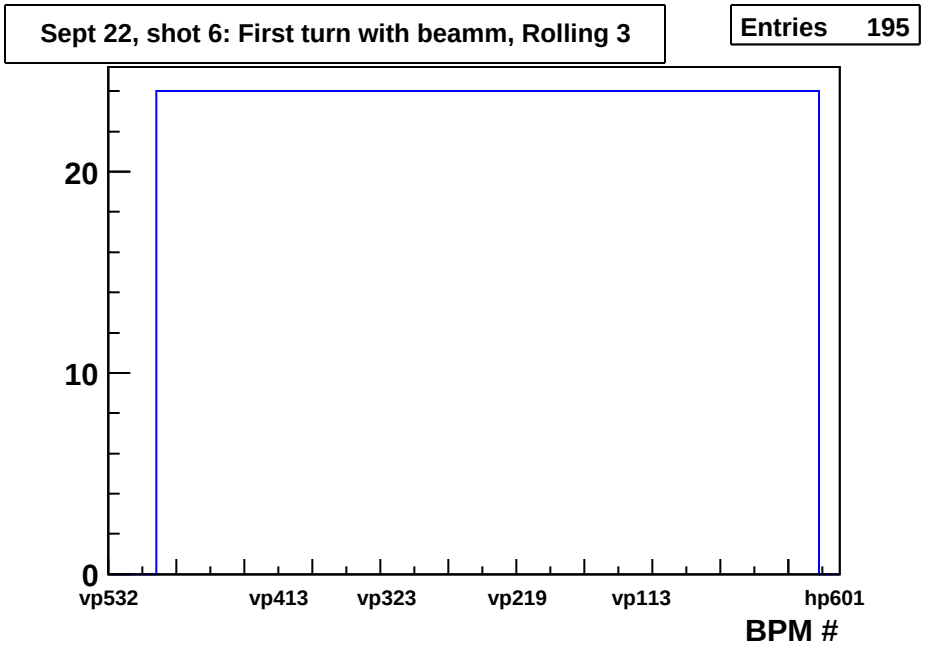

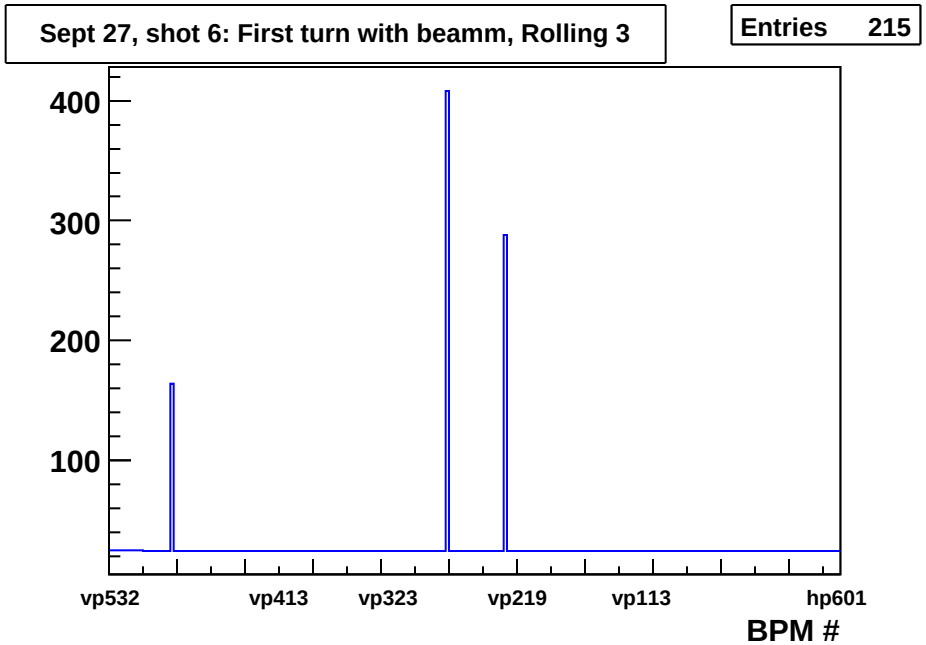

State 20 Injection. Largest upward step in rolling average of 3 turns.

09/29/2006 15:01

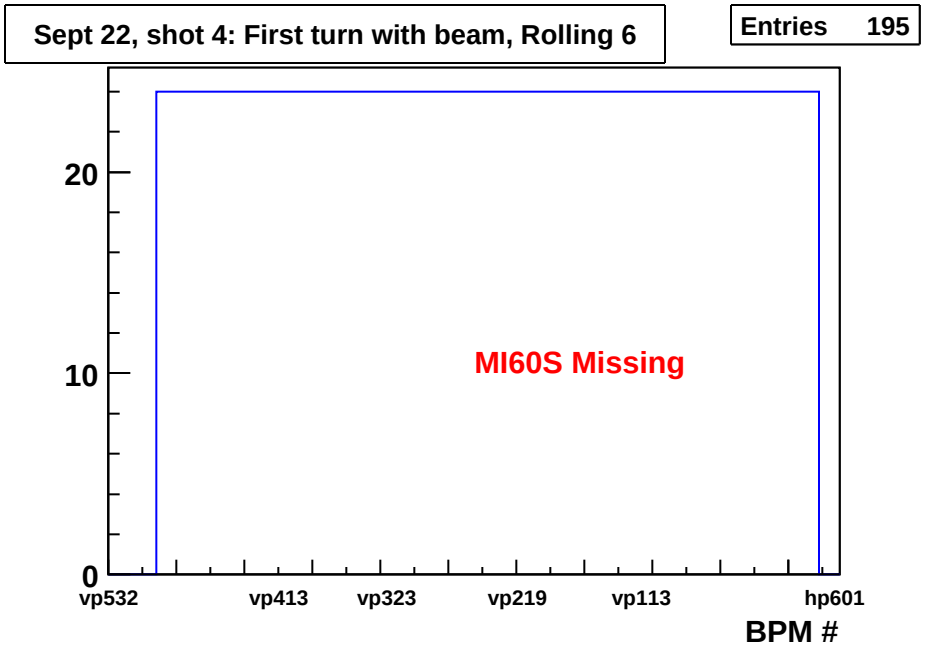

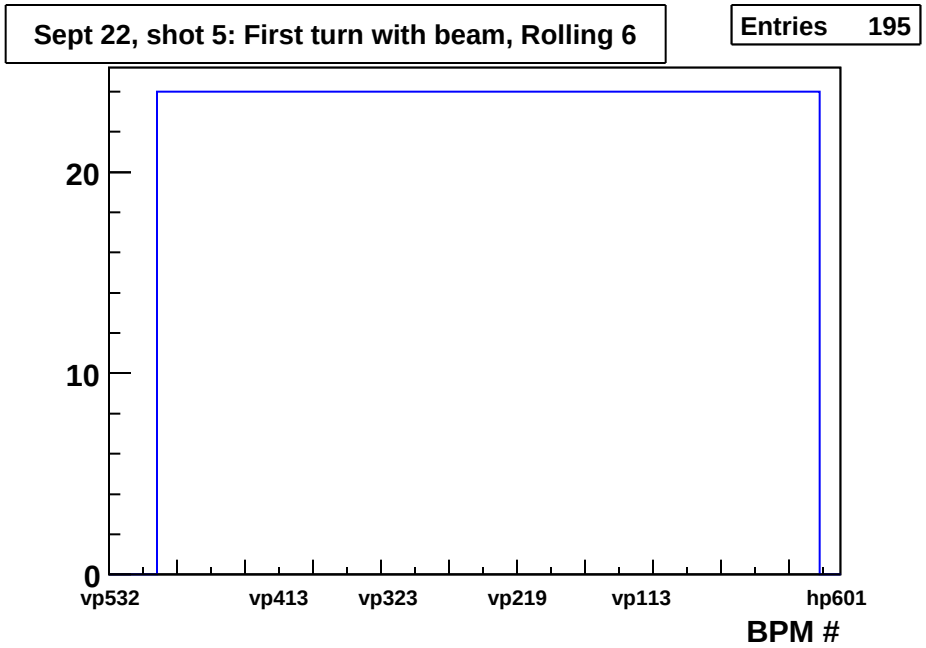

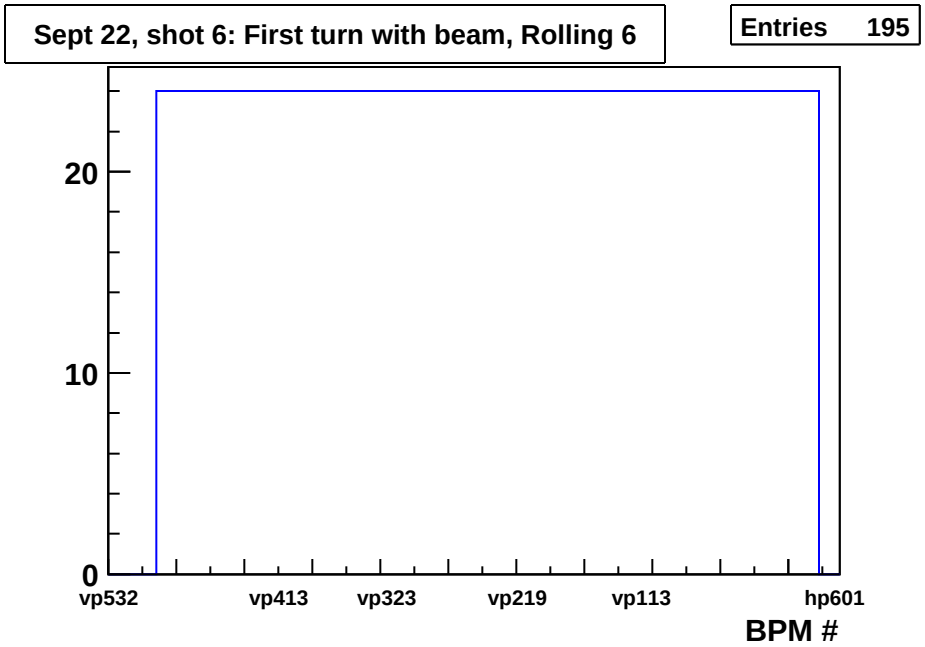

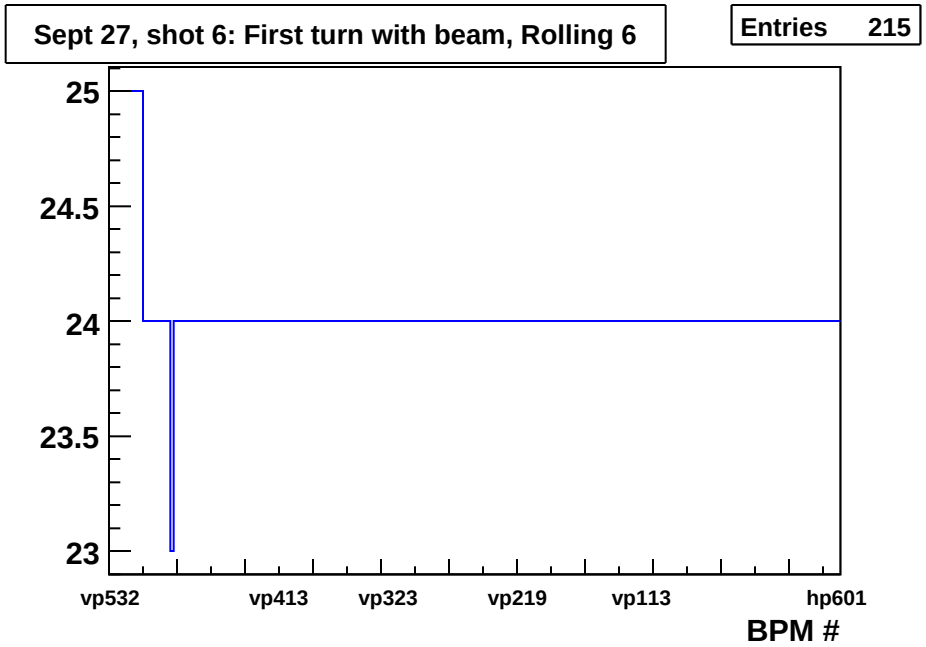

State 20 Injection. Largest upward step in rolling average of 6 turns.

09/29/2006 15:01

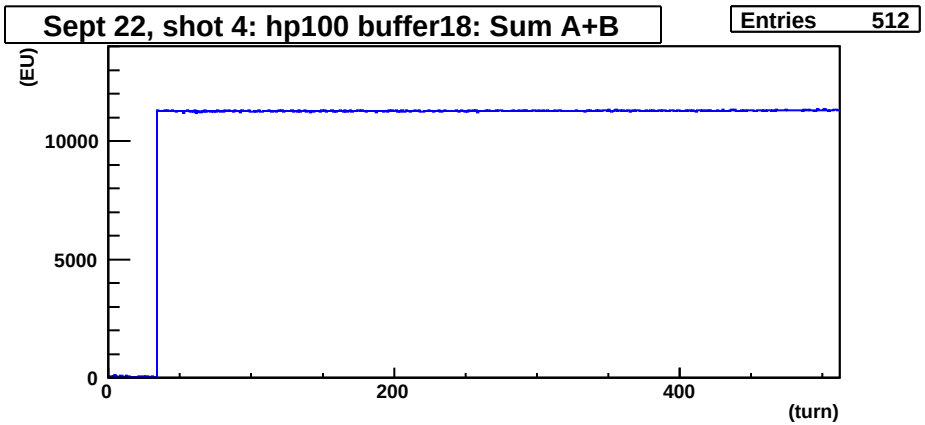

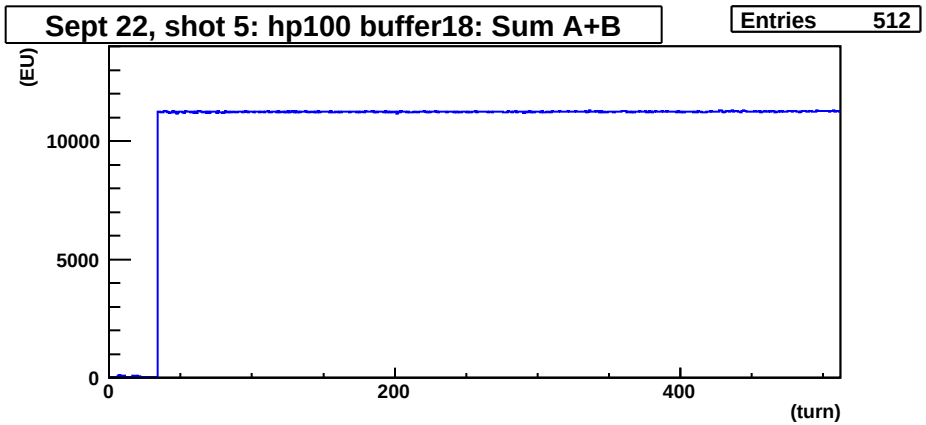

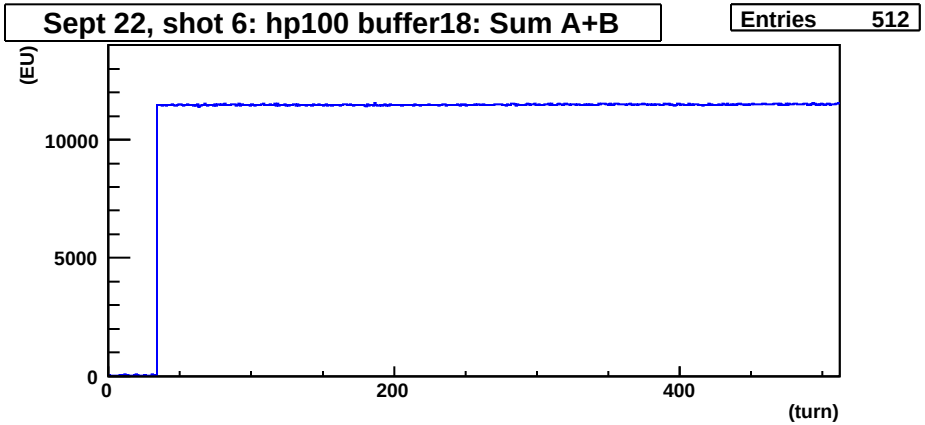

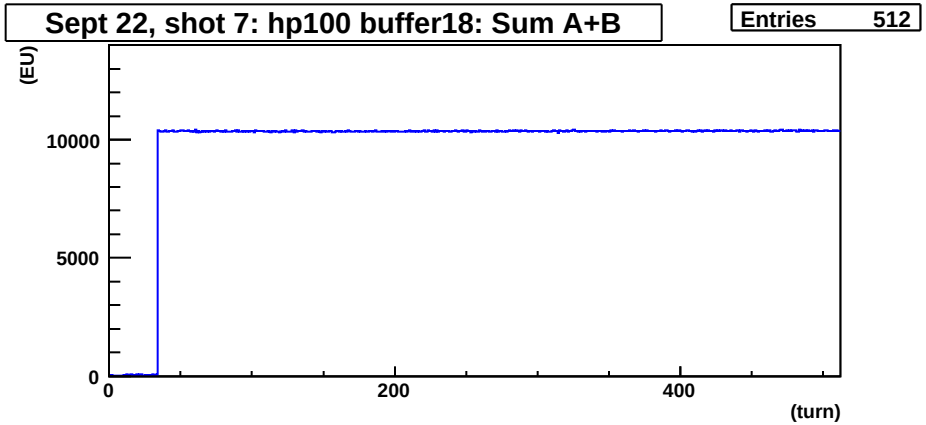

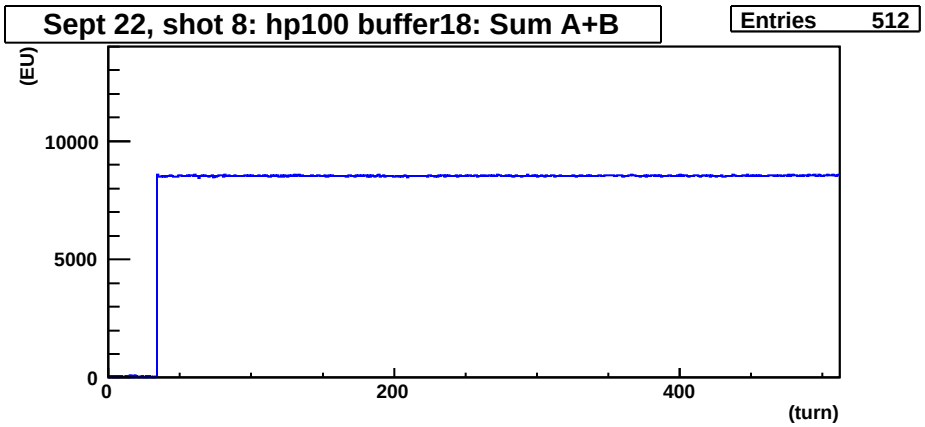

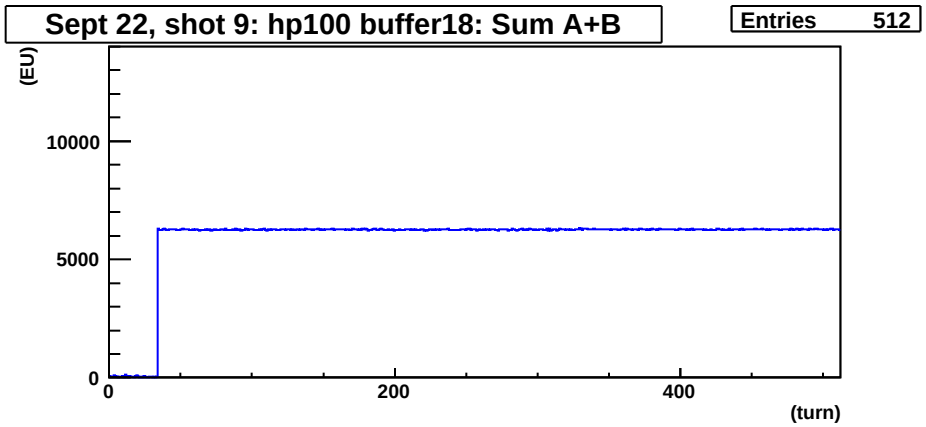

State 11 Injection. Examples of good injections.

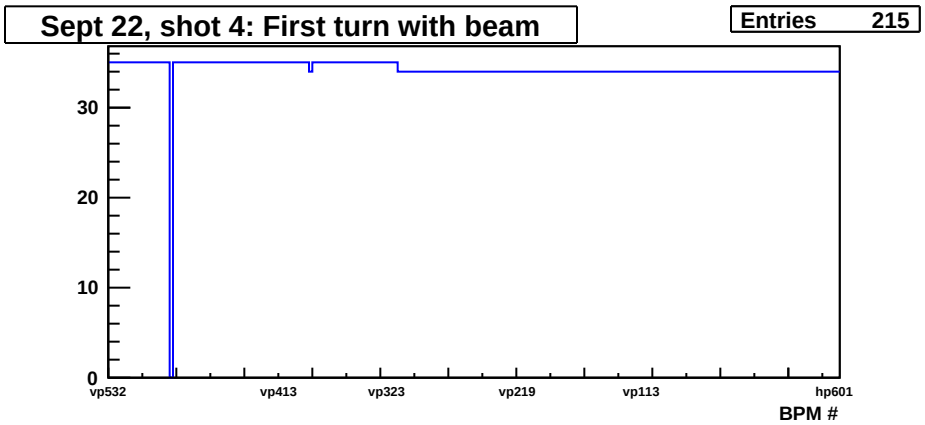

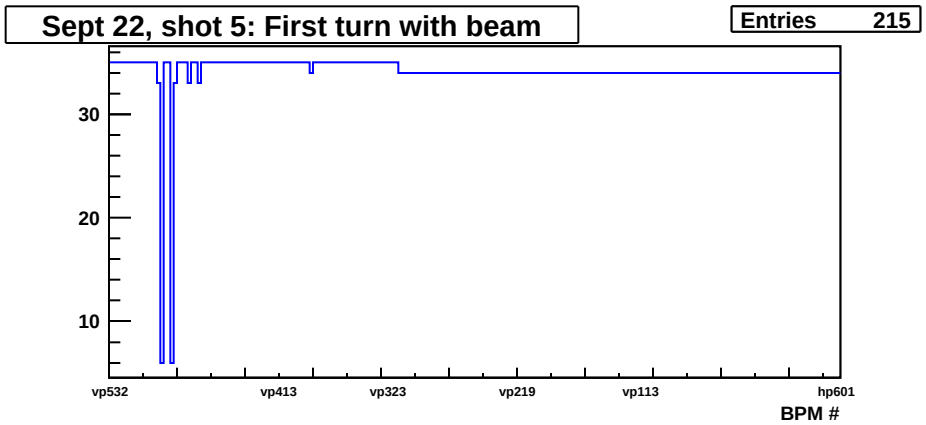

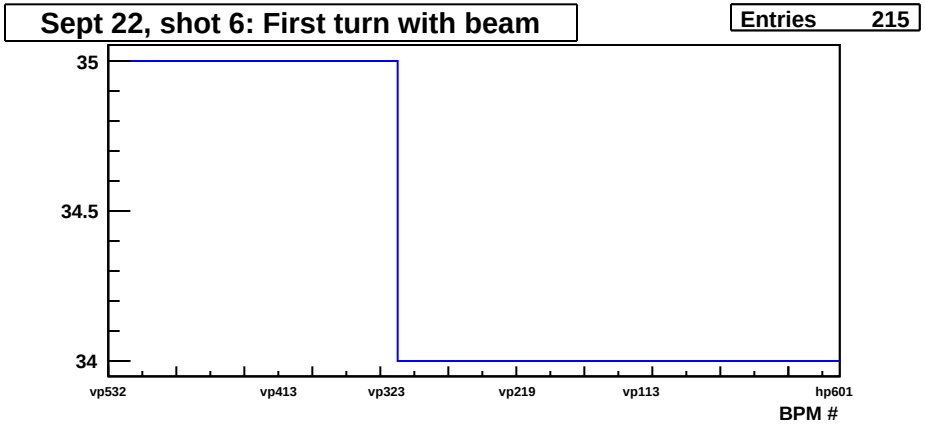

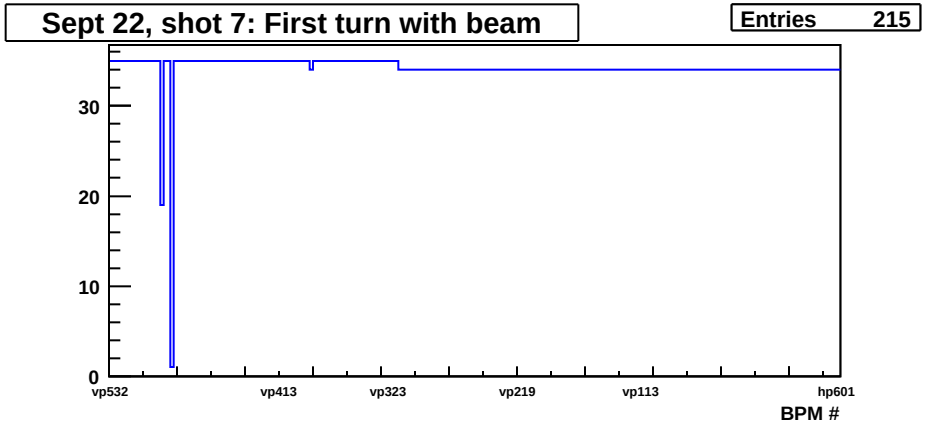

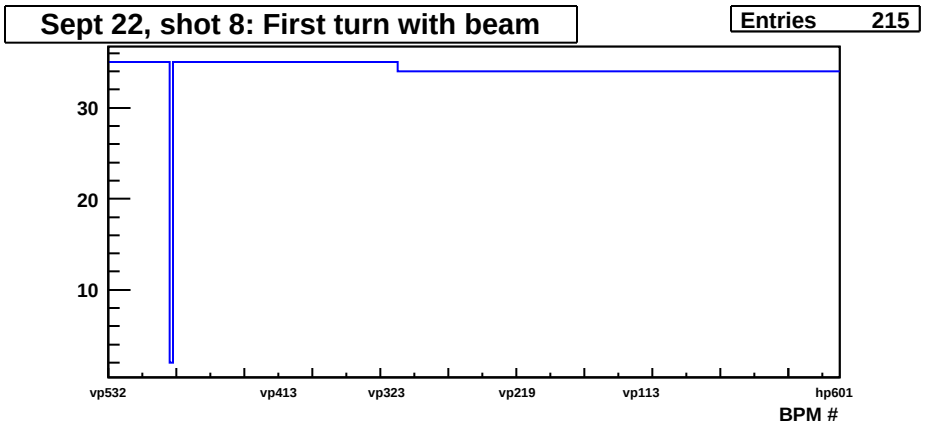

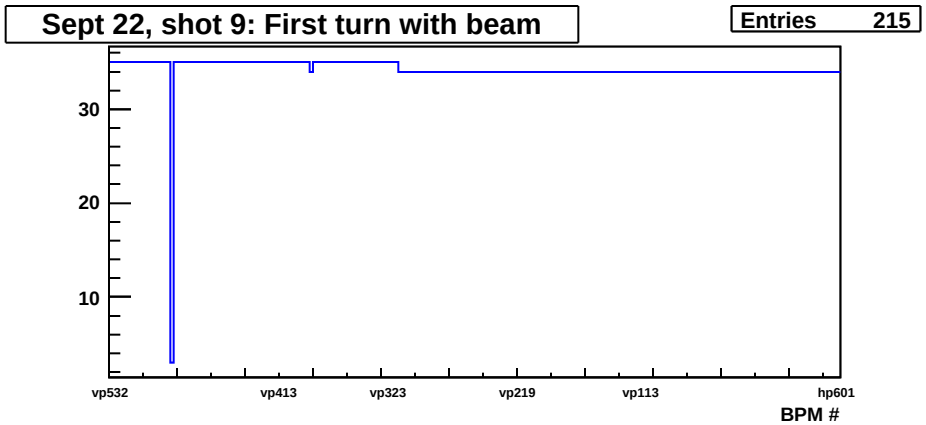

State 11 Injection. First turn over threshold.

09/29/2006 15:01

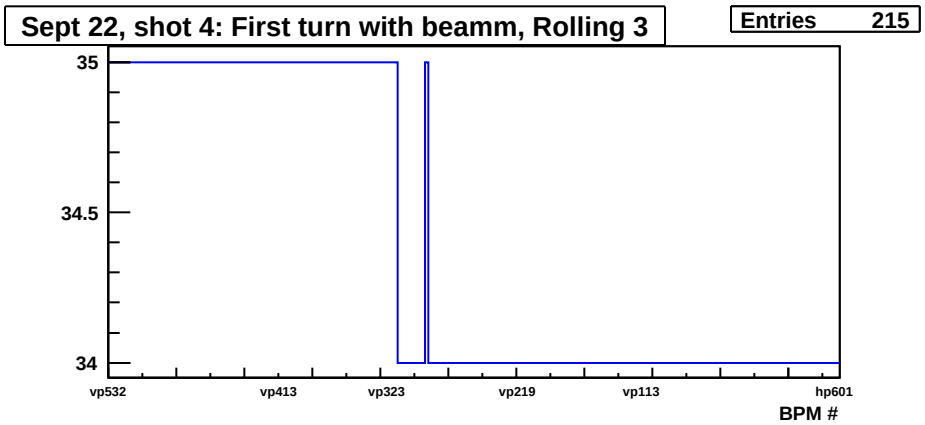

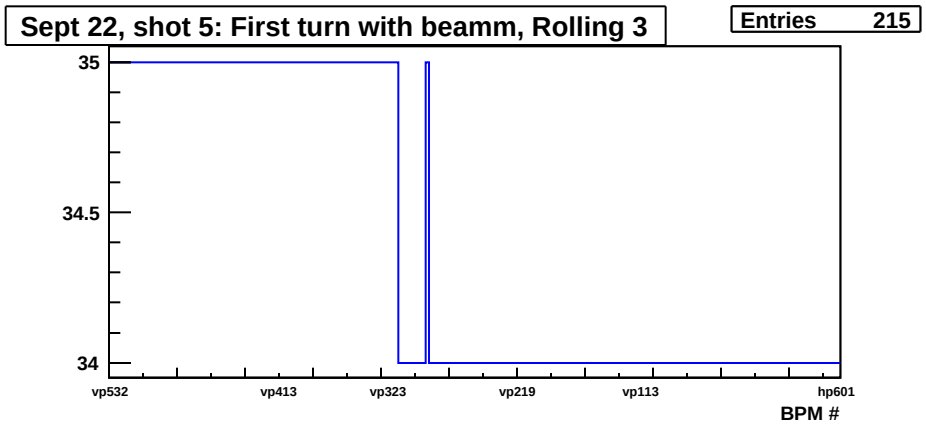

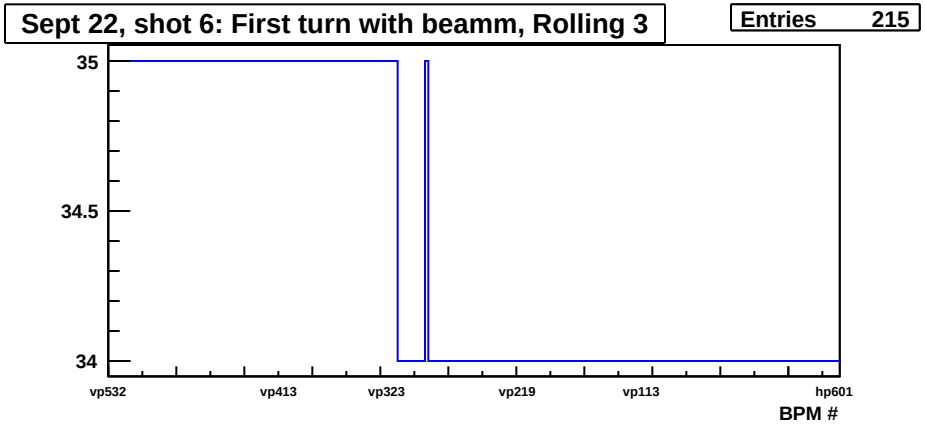

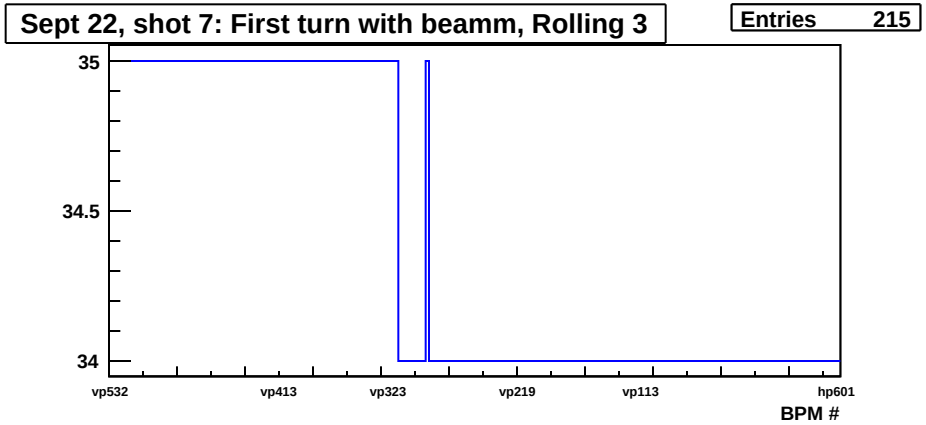

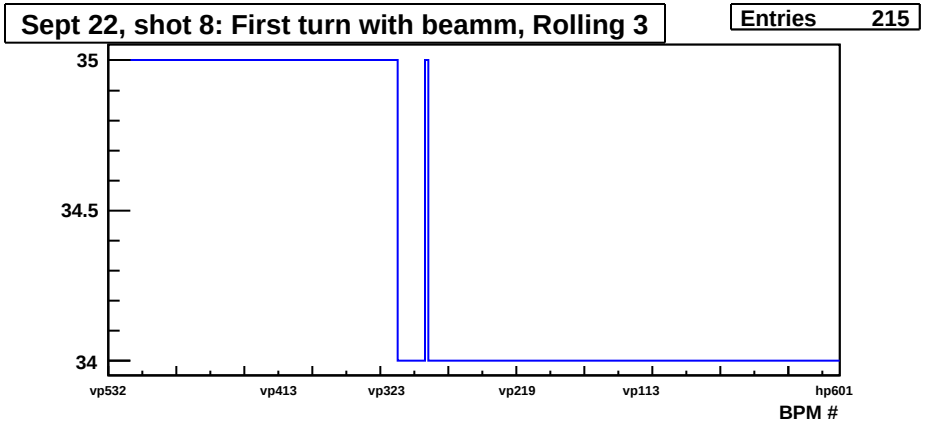

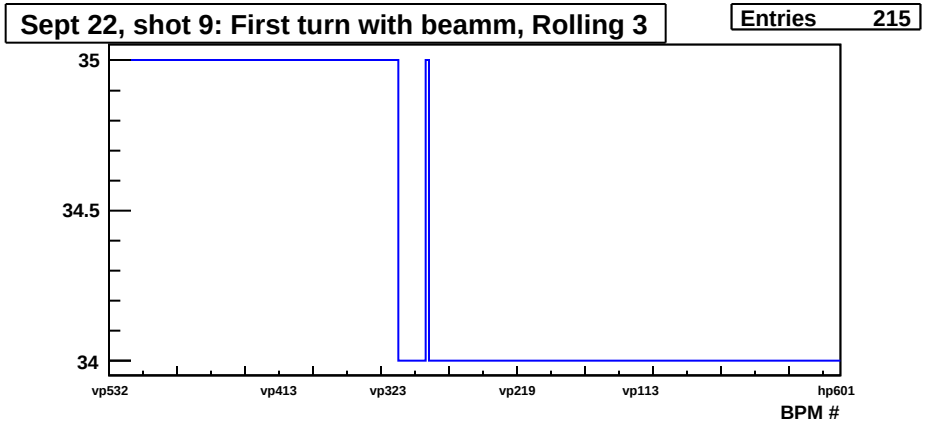

State 11 Injection. Largest upward step in rolling average of 3 turns.

09/29/2006 15:01

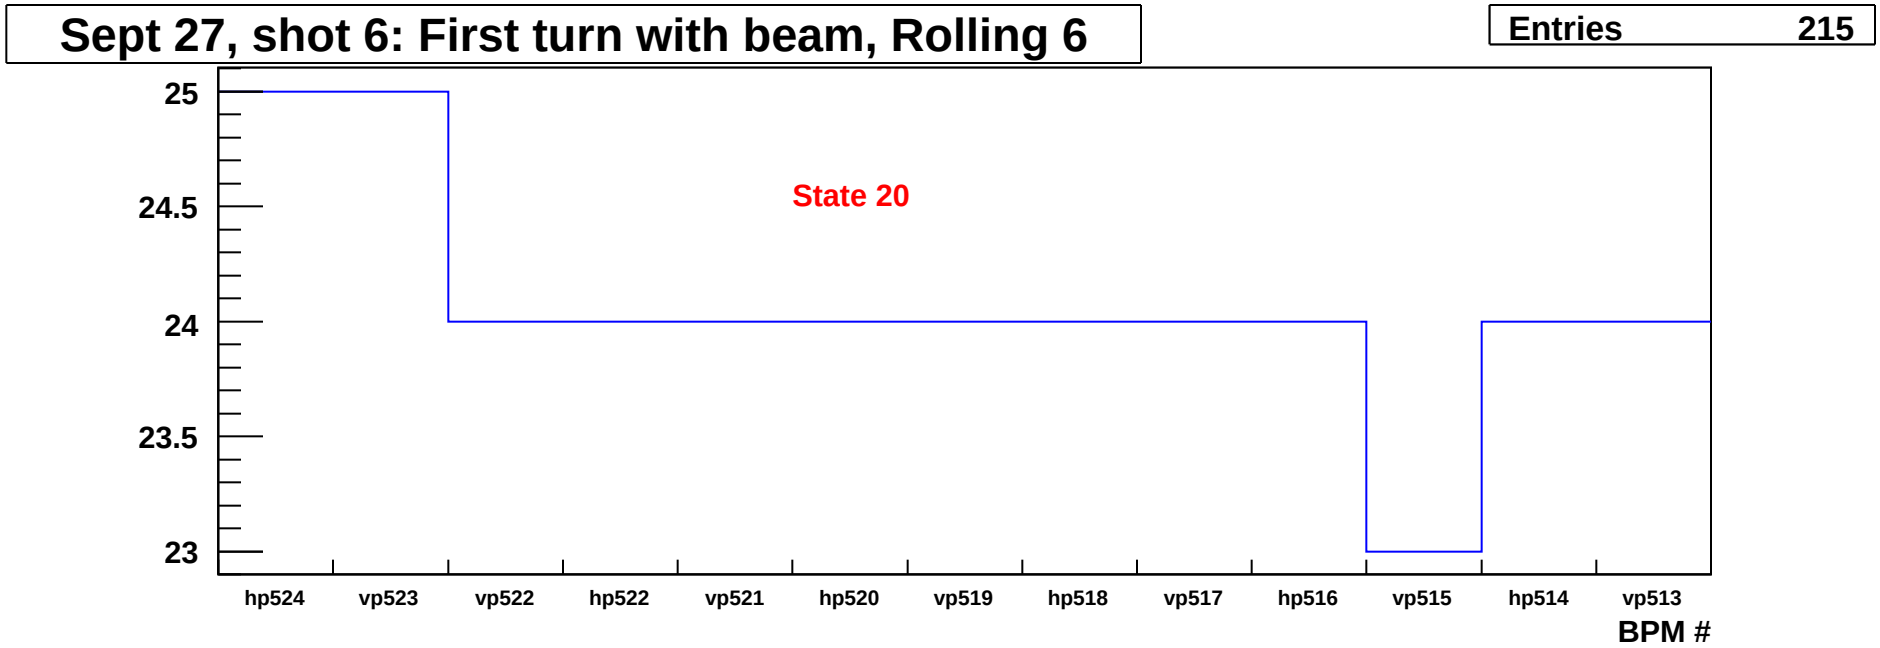

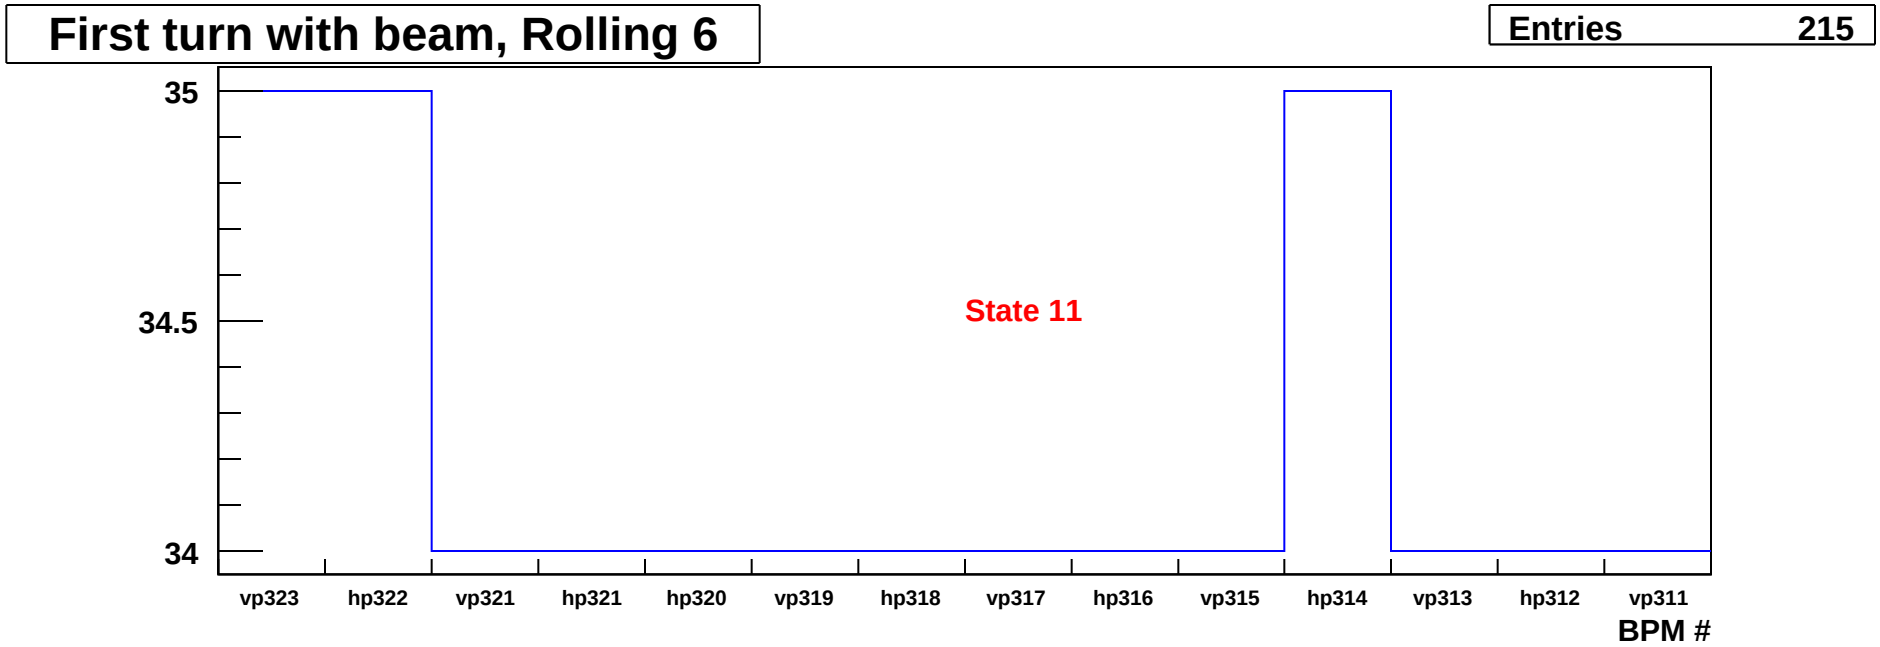

States 20 and 11 Injection. Detail near injection transfer line.

09/29/2006 15:01

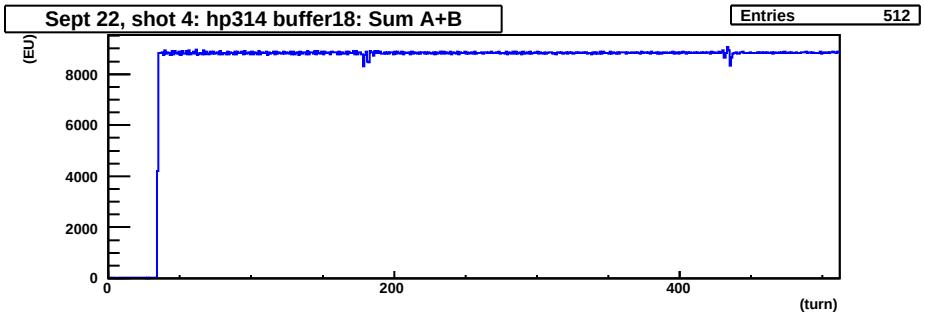

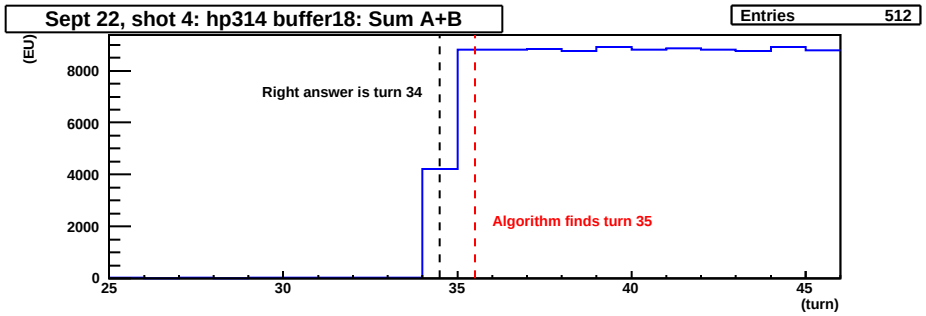

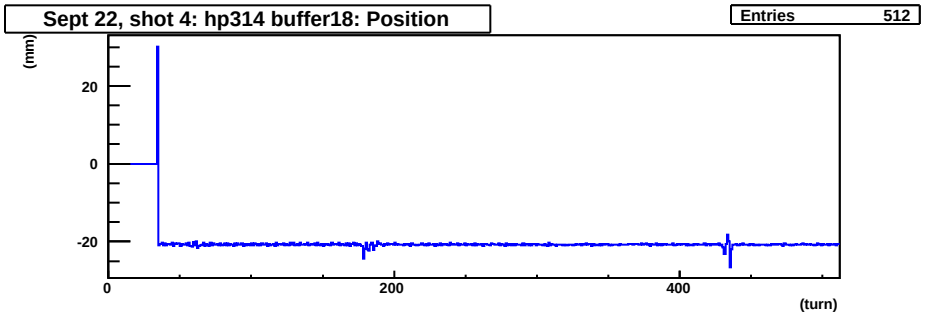

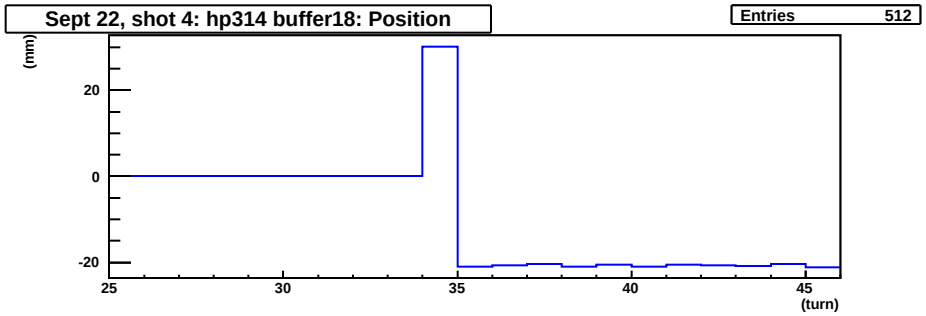

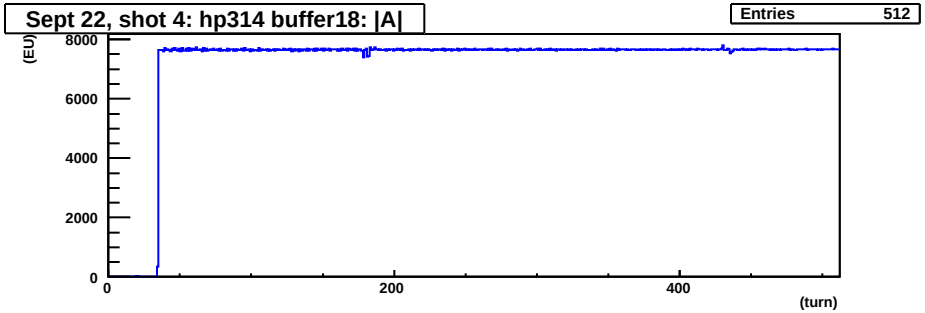

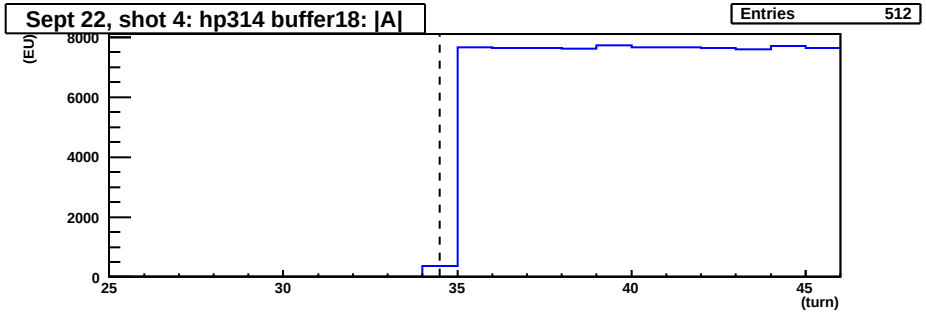

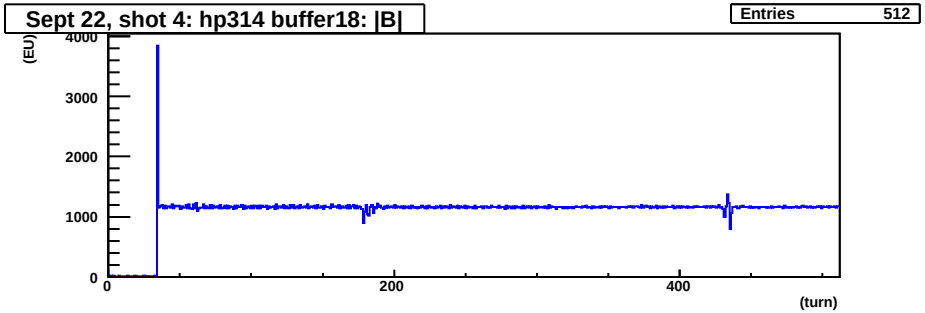

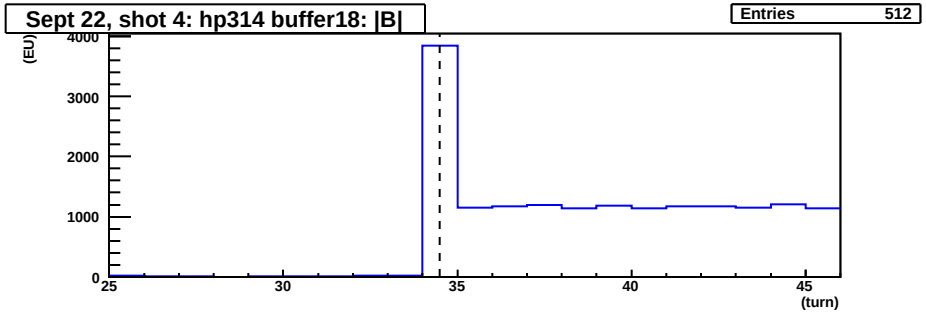

State 11 Injection. Turn by turn data for hp314.

09/29/2006 15:01

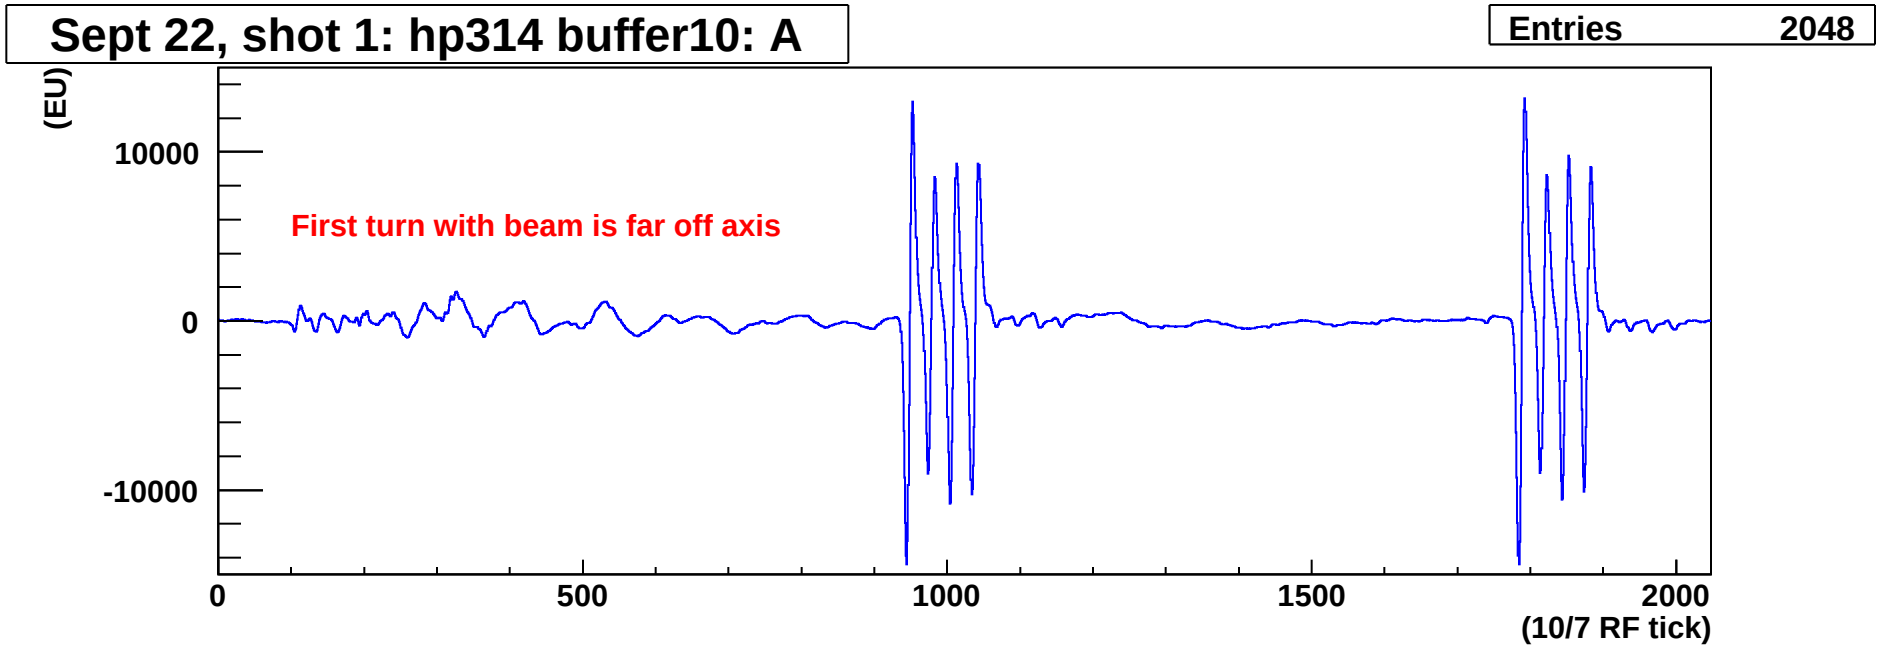

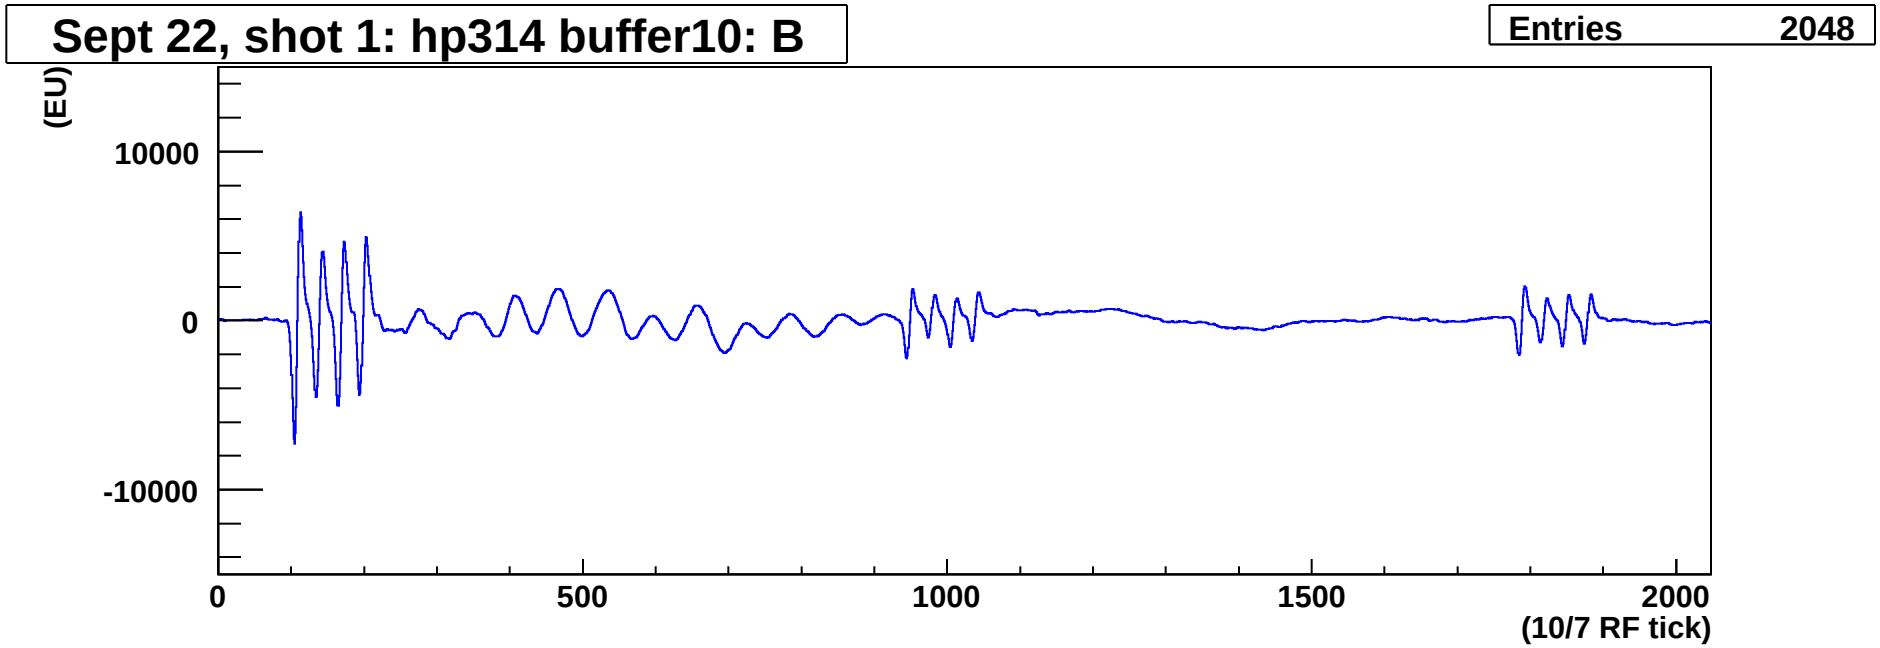

State 11 Injection. Raw data for hp314.

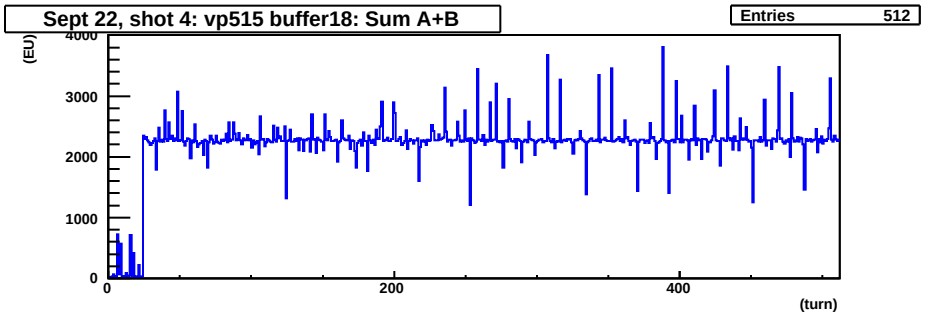

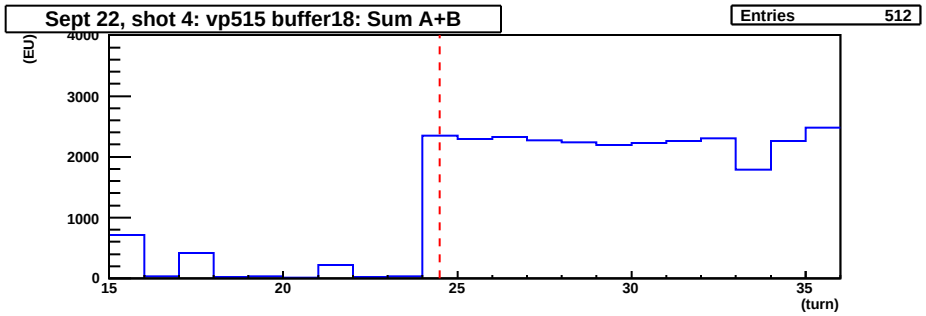

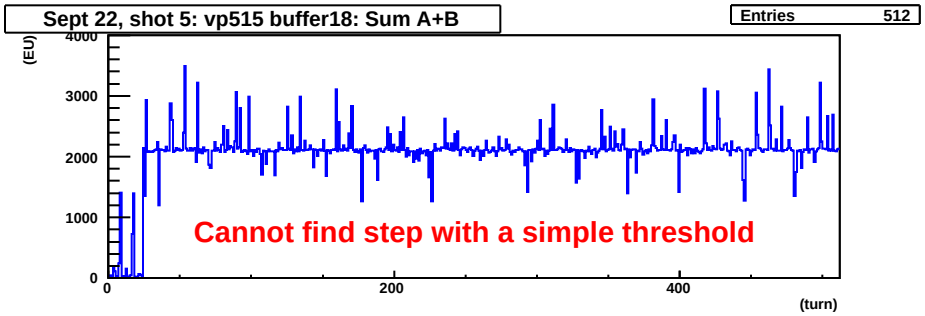

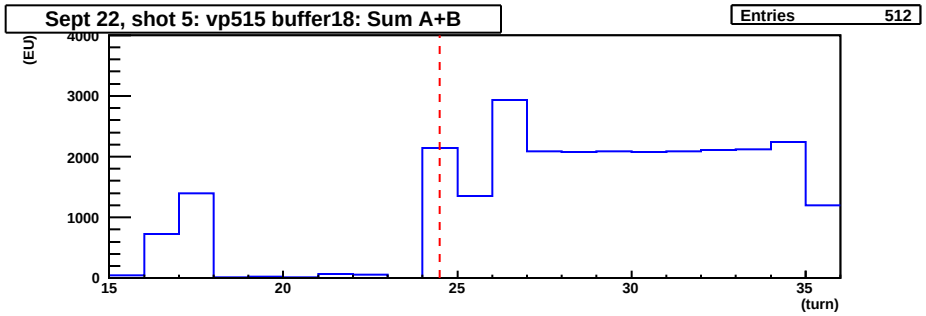

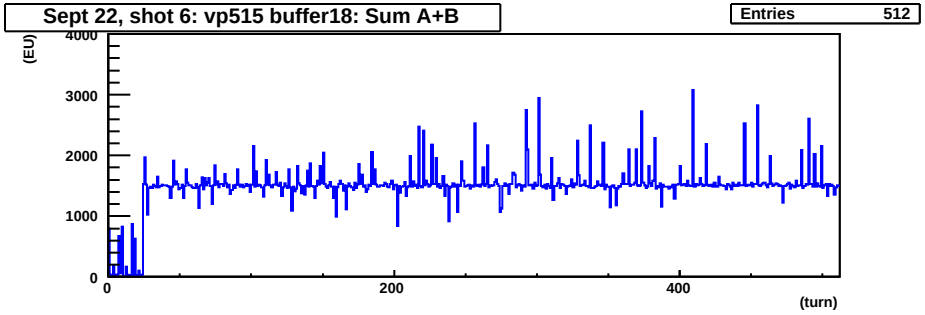

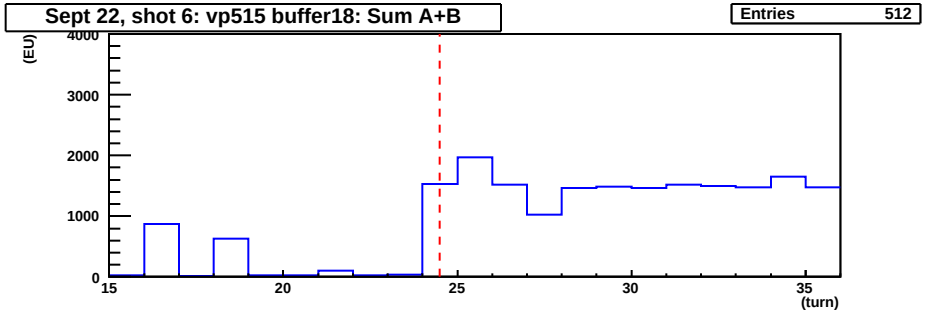

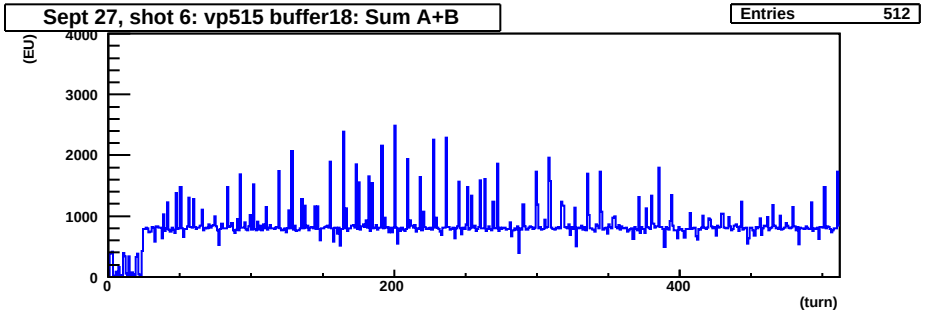

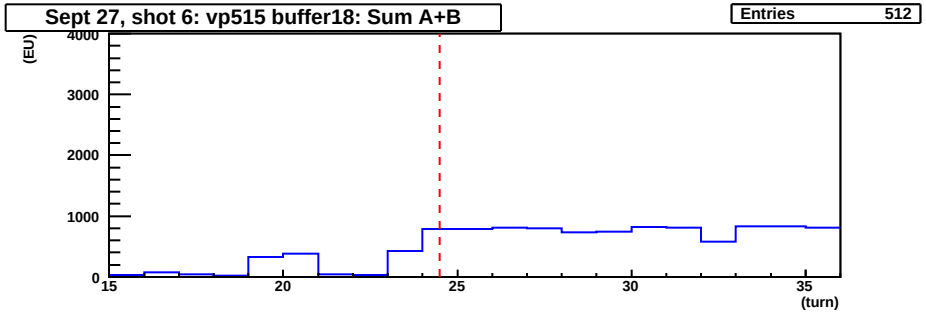

State 20 Injection. Four examples of turn by turn for vp515.

09/29/2006 15:01

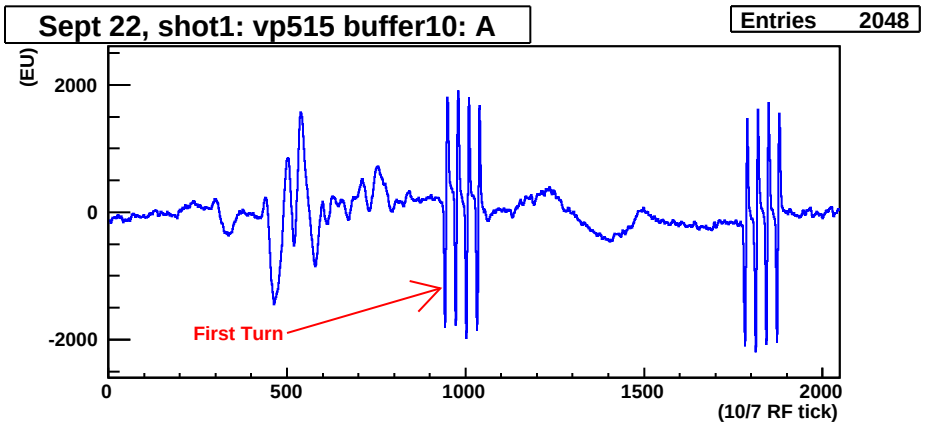

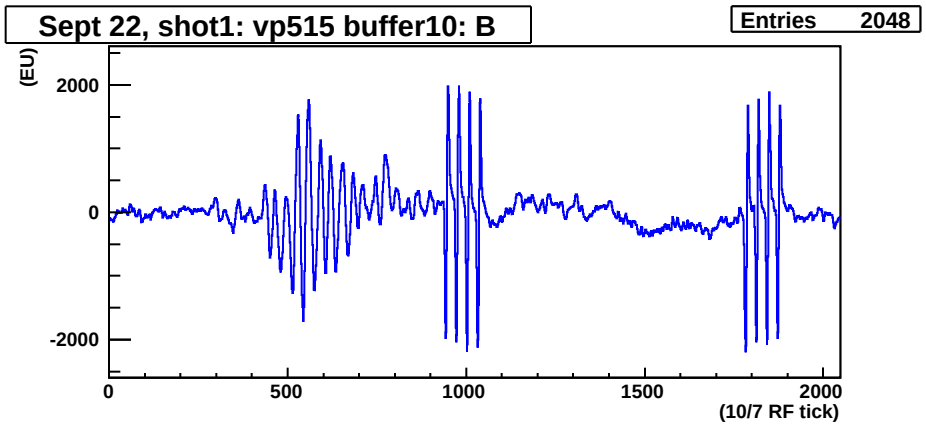

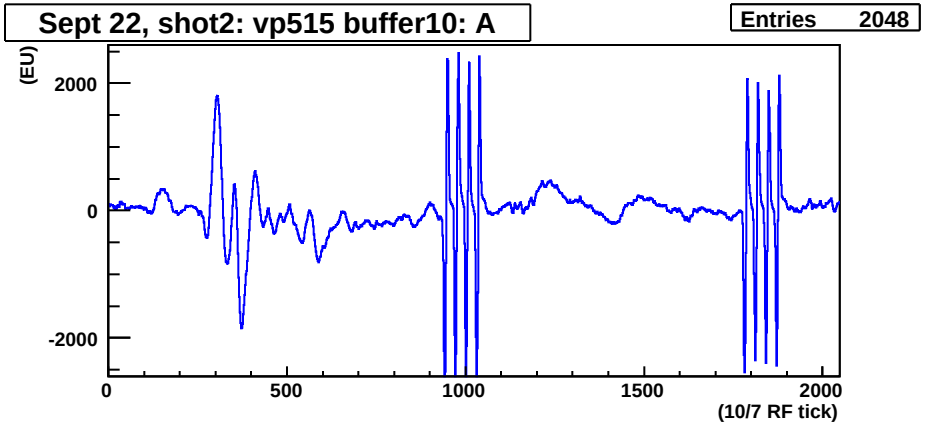

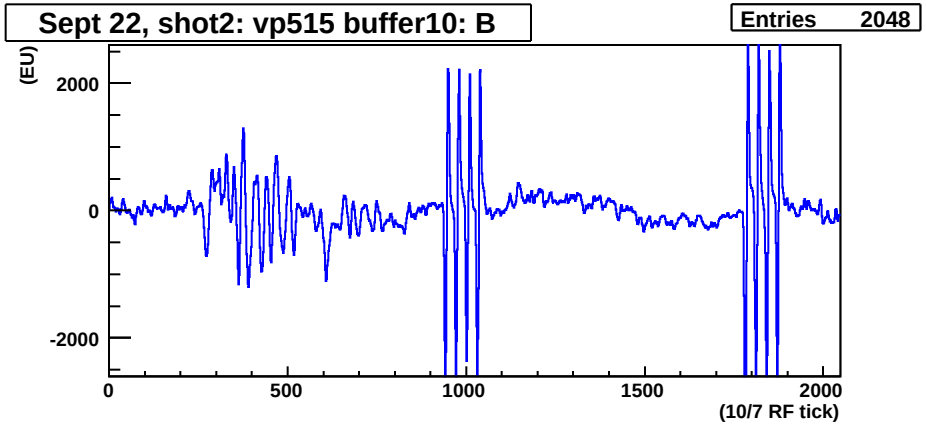

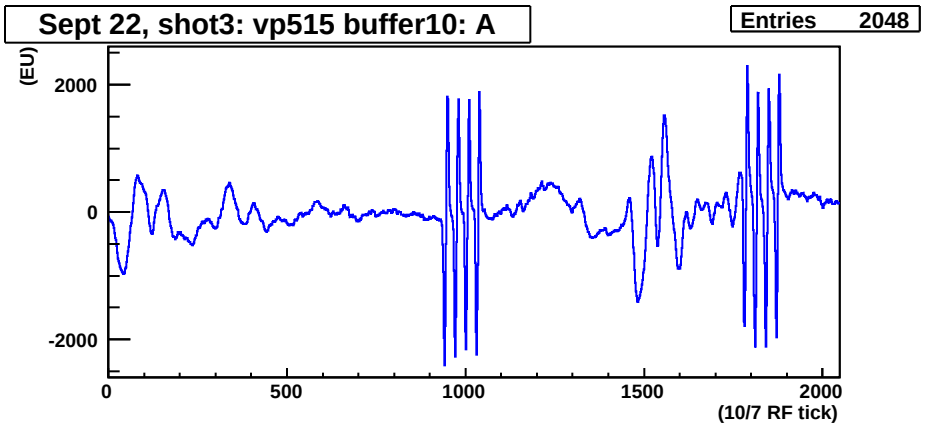

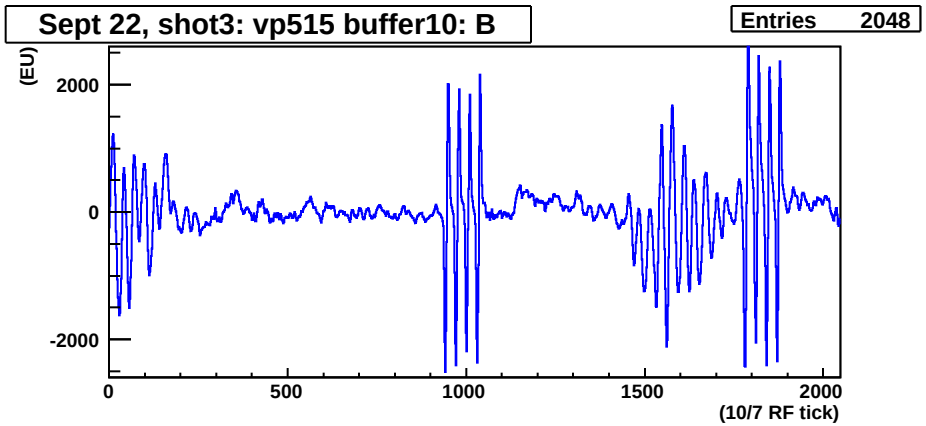

State 20 Raw data at injection for vp515.