

Tevatron Flying Wire OAC Specifications


General Overview :

There has been much discussion about the method of the final calculations for the Tevatron emittances and lifetimes derived from tevatron instrumentation. Currently these parameters are calculated in the Instrument front ends are then in turn presented as ACNET parameters. Upon last discussions and meetings with Tevatron, Instrumentation and Contronls Departements is was suggested that an Open Access Client (OAC) be created called *TEVINS*. This TEVINS OAC would take inputs from various Tevatron instrument front ends and perform calculations for beam emmittance, partial (proton & pbar) and luminosity lifetimes , and calculated luminosities for CDF and D0 of Tevatron beam during stores and through the shot setup process. This OAC will be developed and maintained for all eternity by Brain Hendricks.

Calculated Devices (output) from the OAC :

The desire would be to have the OAC calculate a set of Tevatron accelerator parameters derived from many different existing tevatron instruments. This set of calculated devices would be ACNET devices “owned” by the proposed Tevatron TEVINS OAC. The OAC would be expected to calculate the following devices:

- 1) Horizontal Emittance for each 36 proton and pbar bunches and average. ϵ_h
- 2) Vertical Emittance for each 36 proton and pbar bunches and average. ϵ_v
- 3) Longitudinal Emittance for each 36 proton and pbar bunches and average. ϵ_p
- 4) Predicted Luminosity from above emittances for each 36 bunches and average at B0 .
- 5) Predicted Luminosity from above emittances for each 36 bunches and average at D0.
- 6) Predicted average and 36 for proton and pbar ϵ_h and ϵ_v calculated from real time luminosity and intensity parameters.

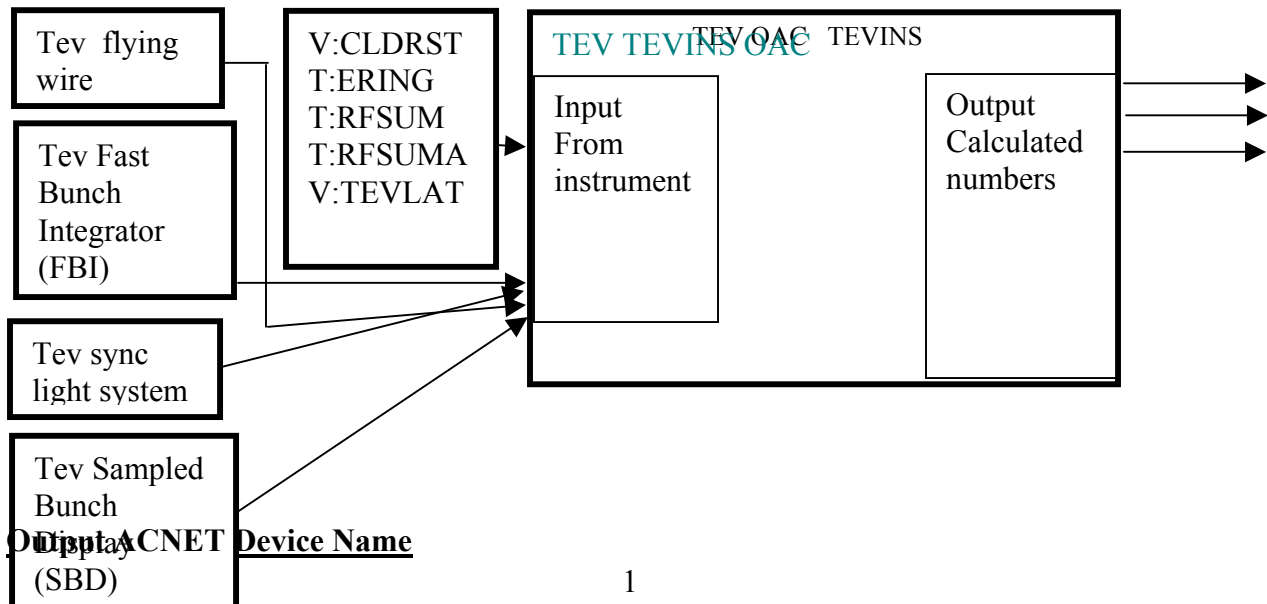

Each of the new output devices should have the following characteristics:

- The devices should be array devices that are 37 elements long. The 0th element or [0] should contain the average value of rest of the 36 elements.
- [1] – [36] of the array device should contain the individual bunch information.

The names of these output devices should be as follows:

1) Horizontal Emittance :

Proton: T:PHE[1] – [36] Average proton horizontal emittance = T:PHE[0]
Pbar: T:AHE[1] – [36] Average proton horizontal emittance = T:AHE[0]

2) Vertical Emittance :

Proton: T:PVE[1] – [36] Average proton horizontal emittance = T:PVE[0]
Pbar: T:AVE[1] – [36] Average proton horizontal emittance = T:AVE[0]

3) Longitudinal Emittance :

Proton: T:PPE[1] – [36] Average proton horizontal emittance = T:PPE[0]
Pbar: T:APE[1] – [36] Average proton horizontal emittance = T:APE[0]

4) B0 Luminosity :

T:LUMB0[1] – [36] Average B0 luminosity = T:LUMB0[0]

5) D0 Luminosity :

T:LUMD0[1] – [36] Average D0 luminosity = T:LUMD0[0]

Equations to use for Calculation of Output Devices :

The following CLIB routines can be used to calculate the transverse and longitudinal emittance values. These should be verified by Mike Martens. If further equations are needed Mike will provide them.

1. Horizontal Emittance for each 36 proton and pbar bunches. ϵ_h
There is the function *emitt_dp()* in physlib that can be used to calculate this parameter.
2. Vertical Emittance for each 36 proton and pbar bunches. ϵ_v
There is the function *emitt_dp()* in physlib that can be used to calculate this parameter.
3. Longitudinal Emittance for each 36 proton and pbar bunches ϵ_p
4. Predicted Luminosity from above emittances for each 36 bunches at B0
There is the function *calc_lum()* in physlib that can be used to calculate this parameter.
5. Predicted Luminosity from above emittances for each 36 bunches at D0.
There is the function *calc_lum()* in physlib that can be used to calculate this parameter.

Additional Devices owned by TEVINS to Calculate Output Devices :

It will be necessary for the OAC to own some additional ACNET parameters to help define the mapping between input parameters and calculation of output parameters. This section still needs some more refinement but in general there will need to be some of the following parameters.

T:XXXSpH [0-NUM_STATES] = Instrument value
 T:XXXSpV [0-NUM_STATES] = Instrument value
 T:XXXXBL [0-NUM_STATES] = Instrument value
 T:XXXXDP [0-NUM_STATES] = Instrument value
 T:XXXXEN [0-NUM_STATES] = Instrument value
 T:XXXLAT [0-NUM_STATES] = Instrument value

Where:

P = P for proton, A for pbar.

Instrument value =

- 1 = Flying wire,
- 2 = sync light,
- 3 = SBD,
- 4 = FBI
- 5 = Study parameters.

NUM_STATES = 1-24 or number of states for V:CLDRST

Input Devices to be used for Calculated OAC Devices :

The input devices come from existing tevatron instructs that the OAC will read and make calculations from. Most of these input devices are ACNET device but some are obtained from database queries. The following is the set of Input devices that will be needed to make all necessary calculations.

- 1) Flying wire horizontal sigmas for all 36 proton and pbar bunches for given tevatron state.
- 2) Flying wire vertical sigma for all 36 proton and pbar bunches for given tevatron state.
- 3) Flying wire longitudinal sigmas for all 36 proton and pbar bunches for given tevatron state.
- 4) The proton and pbar Total intensities from the FBI system.
- 5) The proton and pbar intensities from the FBI system for each 36 bunches.
- 6) The proton and pbar intensities from the SBD system for each 36 bunches.
- 7) The average proton and pbar bunch lengths from the SBD system.
- 8) The RF sum for both proton and pbar cavities.
- 9) The 16 Tevatron lattices obtained from database and index from V:TEVLAT.
- 10) The energy of the tevatron.
- 11) The "state" of the tevatron reflected by the state device C:CLDRST.

Input Device Names :

The following device names

Function	ACNET NAME	FTD	Number of Array elements	Description
FW Proton hor sigma	T:FWHPSG	state trans	72	pass 1 and 2
FW Proton ver sigma	T:FWVPSG	state trans	72	
FW Pbar hor sigma	T:FWHASG	state trans	72	
FW Pbar ver sigma	T:FWVASG	state trans	72	
FBI proton intensity	C:FBIPNG	1 HZ	37	
FBI pbar intensity	C:FBIANG	1 HZ	37	
SBD Proton bunch length	T:SBDPSS	1 HZ	37	
SBD Pbar bunch length	T:SBDASS	1 HZ	37	
SL Proton hor sigma	T:SLPESX	0.1 HZ	36	
SL Proton ver sigma	T:SLPESY	0.1 HZ	36	
SL Pbar hor sigma	T:SLAESX	0.1 HZ	36	
SL Pbar ver sigma	T:SLAESY	0.1 HZ	36	
RF sum protons	T:RFSUM	1 HZ	NA	
RF sum pbars	T:RFSUMA	1 HZ	NA	
Tev Energy	T:ERING	1 HZ	NA	
Tev Program energy	T:IPROG	1 HZ	NA	

Which Input device to use in the calculation for output device:

Collider State	FWH σ	FWV σ	FWL σ	SyncH σ	SyncV σ	SBDP σ	Tev latt	Energy	LBSEQ
1	X	X				X	0	150	0
2	X	X				X	0	150	0
3	X	X				X	0	150	0
4	X	X				X	0	150	0
5	X	X				X	0	150	0
6	X	X				X	0	150	0
7	X	X				X	0	150	1
8	X	X				X	1	150	1
9	X	X				X	1	150-980	1
10				X	X	X	1	980	25
11				X	X	X	16	980	25
12				X	X	X	16	980	25
13				X	X	X	16	980	25
14				X	X	X	16	980	25
15	X	X				X	16	980	25
16							16	980	
17								980	
18							1	980	
19							1	150-980	
20							0	150	
21							0	150	
22							0	150	
23							0	150	

When Does OAC Read Data?

- ☐ Flying wire data is ready on any transition of the state device V:TFWRDY. (This is not yet implemented, but should be soon)
- ☐ Sync light returns data at an FTD of .1HZ.
- ☐ SBD returns data at an FTD of 1Hz.
- ☐ FBI returns data at an FTD of 1 Hz

OAC Logging for Error Diagnostics and Performance:

The OAC should provide a “standard” form of error logging and diagnosing performance that can be read and accessed from ACNET applications. Error reporting for OAC’s is more critical than applications because there is

Conditions for Errors within the OAC:

Application Program Support for OAC:

There will need to be an application in which to setup the input parameters for the OAC to take and produce data. This application does not have to be very complicated. It will need to read and set the OAC owned devcies. This application will alos provide the interface for reading the OAC error log. This application will be written by Dean Still. It will have the following attributes.

- Standard user interface.

Calculations of Predicted Luminosity :

Calculations of Predicted Emmittance from Luminosity and Intensities :

Calculations of Lifetimes :