

1. Table of Contents

1.	Table of Contents.....	1
2.	Introduction.....	1
3.	Setup for Reverse Protons.....	2
a.	Pbar Annex Sequencer: Fast Recycler Start	3
b.	Pbar Annex Sequencer: Fast Recycler Reverse Protons.....	24
c.	Pbar Annex Sequencer: Fast Recycler Finish Reverse Protons.....	27
d.	Pbar Sequencer: Reverse Protons to the Debuncher.....	37
e.	De-tune the DRF1 Rotator Cavities.....	39
4.	Circulating Beam in the Debuncher.....	39
a.	\$16/\$2D in the TLG.....	39
b.	One Shots.....	39
5.	Debuncher Orbits.....	40
a.	Java Orbit Preparation.....	40
b.	Java BPM Orbits.....	41
6.	Debuncher Admittance Measurement.....	41
a.	Pbar Sequencer: Deb Hor aperture scan rev p.....	41
b.	Pbar Sequencer: Deb Vert aperture scan rev p.....	42
c.	FTP versus Lumberjack Manual Measurements.....	44
d.	Java Fit of Lumberjack Data.....	44
7.	Beam up AP2.....	44
a.	Establishing beam up the AP2 line.....	44
b.	Beam Modes	45
i.	Partial Debuncher Turn to AP2.....	45
ii.	Circulating Debuncher beam to AP2.....	45
8.	D/A Orbit Studies	45
9.	Return to Stacking.....	45

2. Introduction

The purpose of this document is to outline the procedural steps required to enter various Reverse Proton Studies modes. When we are stacking, the P1, P2 and AP1 lines are all configured for 120 GeV protons. When switching to Reverse Protons, we must stop stacking and setup the lines for 8 GeV protons. The 8 GeV protons then are sent down the AP3 line, where they are injected onto the injection orbit in the Accumulator. From there, we can extract the 8 GeV beam down the D/A line to the Debuncher. We can either circulate the reverse protons in the Debuncher or extract them up the AP2 line. We will outline how to configure the Antiproton Source in a number of different Reverse Proton studies configurations.

First, we will outline how to establish Reverse Protons circulating in the Debuncher from either dedicated TLG events or “one shots.” We will then outline how to extract the Reverse Protons from the Debuncher down the AP2

Reverse Proton Setup Procedures


line either from circulating Debuncher beam or using partial turn Debuncher extraction. We will then cover how to setup for up D/A line studies. Lastly, we will cover how to return Pbar to normal stacking.

Many of the steps needed to enter and exit these study modes are consolidated into two Pbar sequencers called the Pbar Sequencer and Pbar Annex Sequencer. Other steps require manual intervention. We will assume that we are starting with the Pbar source configured in stacking mode.

3. Setup for Reverse Protons

From stacking mode, our first goal is to configure the Antiproton Source for reverse protons. To do so, we will run the first three aggregates in the Pbar Annex sequencer, followed by the first portion of the Pbar Sequencer “Reverse Protons to Debuncher” aggregate.

We will start by entering the Pbar Sequencer, which can be found on Acnet page P64.



```
VMS PB:P64 Sequencer<NoSets>
P64 P-BAR SEQUENCER DB 27-DEC-05 13:09:17 Pgm_Tools
mode edit log status files help
aggregate commands Run II Start Shot set up
ERR INSTRUCT 200
Run II Start Shot set up
Run II Start Reverse Protons
Run II Switch to Shot Lattice
Run II Finish Reverse Protons
Run II Continue Shot set up
Run II Prepare to Load Pbars
Run II Load Collider Pbars
Run II Revert to Stack Lattice
Run II Return to Stacking
Run II Dry Shots
Run II Revert to Rev Protons
Run II Square Up Core
ERR INSTRUCT 200
SHOT_LOG COMMENT
BEAM_SWITCH Pbar_Source Off
NOTIFY Start
CTLIT_DEVICE D:Q731 OFF
START_PGM SA1144
START_PGM SA1127
START_PGM P162
WAIT_FOR SECS 30
SETIT_DEVICE V:PSHOOT =1
INSTRUCT 202
SET_ENUMERATED V:APSMOD
SET_ENUMERATED V:PBSRC
SET_DEVICE A:APSHOT +=1
ACL_WAIT_FOR_READING_MATCH
SET_DEVICE A:SHTNUM =0
SET_DEVICE V:CASPBT =1
SET_DEVICE V:SETPBT =1
CHECK_DEVICE A:APSHOT READING
CTL_DEVICE A:ISHUTO OFF
SEQUENCER: (mode 2) begins on console 117 slot PB
```

Figure 3-1: The Pbar Sequencer.

Reverse Proton Setup Procedures

After entering the Pbar Sequencer, click on the menu bar item “mode” in the upper left corner of the screen. Select the Pbar Annex (Mode 17) from the selection menu.

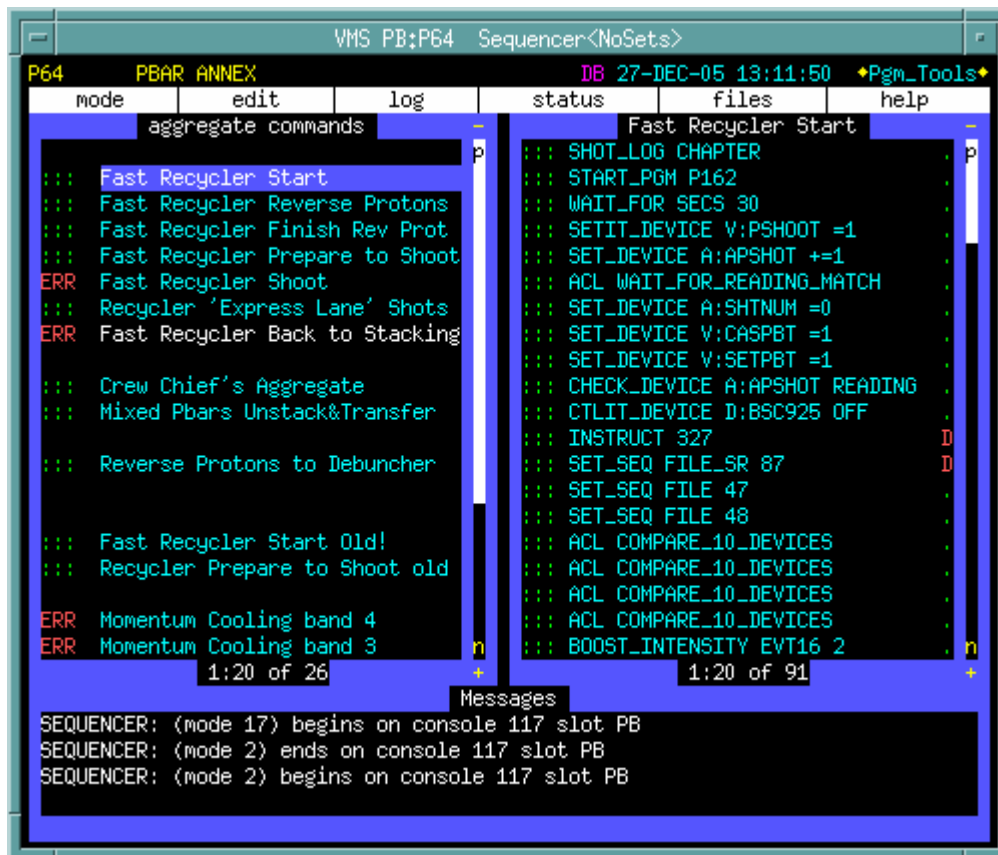


Figure 3-2: The Pbar Annex Sequencer.

We will now run the first three aggregates in the Pbar Annex Sequencer. The same three aggregates are used in the initial stages of the Accumulator to Recycler transfers so there are some commands that may not be necessary for our Reverse Proton studies. We will attempt to point these out as we go along.

a. Pbar Annex Sequencer: Fast Recycler Start

Click on “Fast Recycler Start” in the left column of the sequencer. The right column now shows the commands in this sequencer. To start this aggregate, click on the green “:::” on the first command in the sequence. We will now step through each command in the sequencer.

::: SHOT_LOG CHAPTER

This command starts a new shot log chapter in the Recycler shot scrapbook at <http://www-bd.fnal.gov/cgi->

Reverse Proton Setup Procedures

mach/machlog.pl?nb=rscrap03&load=no. Since we are not completing a Recycler shot, we can actually skip this command and start the aggregate at the next command.

::: START_PGM P162

Starts the Accumulator BPM TBT Page P162 (keeper is Keith Gollwitzer). This page, as shown below, checks the status of the Accumulator BPM houses and issues resets to any house that is not online. This allows plenty of time for the BPM houses to reboot before they are need in the beam line tune-up. Upon completion, this application self terminates and the window will close on its own.

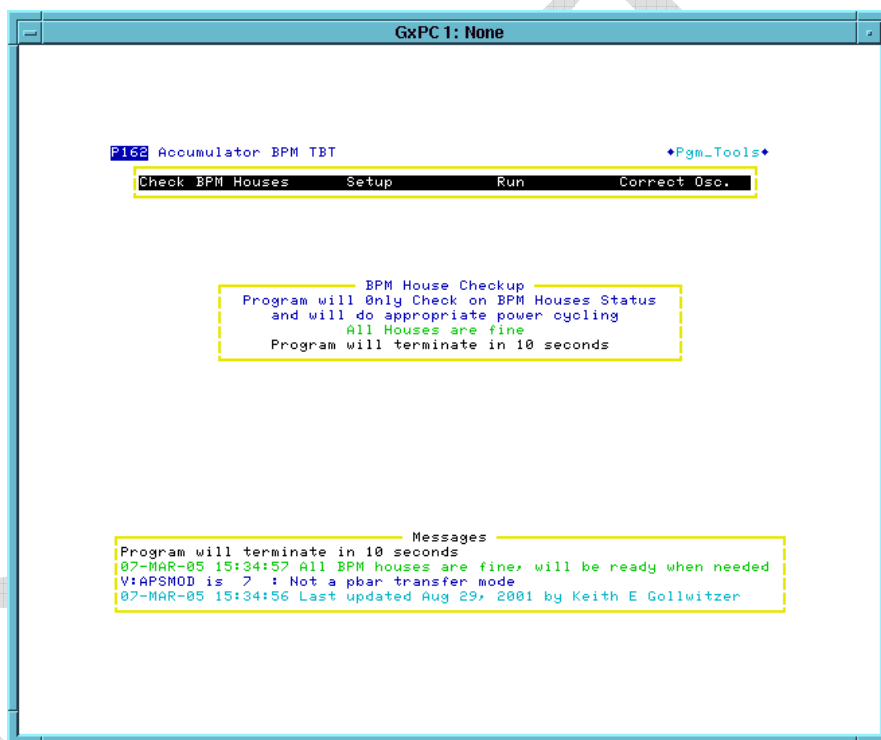


Figure 3-3:

::: WAIT_FOR SECS 30

This command waits 30 seconds for the previous command to complete.

::: SETIT_DEVICE V:PSHOOT =1

Sets the state parameter V:PSHOOT to 1, then pauses long enough to verify that the setting was completed successfully.

Devices that start with V: are called state parameters. State parameters define the operational state of a device or accelerator, allow the sequencers to be more automated, and prevent the different sequencers from getting

Reverse Proton Setup Procedures

out of sequence with each other. Often one sequencer waits at a certain spot until another sequencer changes a state parameter.

V:PSHOOT is a state parameter for the Pbar transfer state. V:PSHOOT state 1 means "not ready for transfer." Later in this aggregate, V:PSHOOT is set to 4 ("Ready for Main Injector Tune up"). The **Main Injector Shot Transfer Line Tuneup** aggregate waits for PSHOOT to be set to 4 ("Ready for Main Injector Tune up") before starting its beam line tune-up.

```
::: SET_DEVICE A:APSHOT +=1
```

Increments A:APSHOT by 1. This is the Pbar transfer series number, which is incremented before and after any Pbar transfer from the Accumulator to the Tevatron or Accumulator to the Recycler. This command is not necessary for Reverse Proton Studies.

```
::: ACL WAIT_FOR_READING_MATCH
```

A Runs an Accelerator Command Language (ACL) script called WAIT_FOR_READING_MATCH that waits for "SDA Shot/Store #" (A:FILE) to read the same value as the Pbar transfer series number (A:APSHOT). More information on ACL scripts can be found at http://adcon.fnal.gov/userb/www/controls/clib/intro_acl.html.

```
::: SET_DEVICE A:SHTNUM =0
```

Sets the "Pbar transfer series Shot #" parameter (A:SHTNUM) to zero. Later on A:SHTNUM is incremented by one for every Pbar transfer. This is not used during Reverse Proton Studies.

```
::: SET_DEVICE V:CASPBT =1
```

The "Pbar transfer SDA case trigger" state (V:CASPBT) is set to 1, which represents "Set up." Possible values for this state parameter include: 1 = Set up, 2 = Unstack Pbars, 3 = Transfer Pbars from Accumulator to Main Injector, 4 = Accelerate Pbars in the Main Injector, 5 = Coalesce Pbars in the Main Injector. This is not necessary for Reverse Proton Studies.

```
::: SET_DEVICE V:SETPBT =1
```

Sets the "Pbar transfer SDA set in case" state device to 1. D88 currently shows no state information descriptions for the different states of this parameter.

```
::: CHECK_DEVICE A:APSSHOT READING
```

Reverse Proton Setup Procedures

Prints the value of the “Pbar Transfer Series Number” parameter (A:APSHOT) in the message window at the bottom of the sequencer in the following format.

```
COM: A:APSHOT present value = #####.00000
```

```
::: CTLIT_DEVICE D:BSC925 OFF
```

Puts in the AP3 beam stop to prevent reverse proton beam from being injected into the Accumulator.

```
::: INSTRUCT 327
```

D

This is a bypassed command that is not needed at this time.

```
::: SET_SEQ FIEL_SR 87
```

D

This is a bypassed command that is not needed at this time.

```
::: SET_SEQ FILE 47
```

Executes sequencer file #47 which resets AP3 line devices. This will clear any trip status before trying to turn the supplies on. Devices in this list are located in AP30 (D:Q901, D:V901, D:Q903, D:Q907 and D:Q909), F27 (D:Q913, D:Q914, D:Q916, D:Q917, D:Q919), and AP0 (D:H914, D:Q924, D:Q926 and D:H926).

```
::: SET_SEQ FILE 48
```

Executes sequencer file #48 which turns on the same AP3 line devices that were reset in the previous sequencer command. With the AP3 line supplies on we will be able to run reverse proton beam up the AP3 line toward the Accumulator.

```
::: ACL COMPARE_10_DEVICES
```

```
::: ACL COMPARE_10_DEVICES
```

```
::: ACL COMPARE_10_DEVICES
```

```
::: ACL COMPARE_10_DEVICES
```

The above four commands each runs an Accelerator Command Language (ACL) script called COMPARE_10_DEVICES. The script verifies that all 8GeV values are the same on all cycles for ramped P1 and P2 line devices. There are a limited number of devices that can be verified in one ACL script, so the script is run four times in order to cover all of the trims. More information on ACL scripts can be found at http://adcon.fnal.gov/userb/www/controls/clib/intro_acl.html.

Reverse Proton Setup Procedures

::: BOOST_INTENSITY EVT16 2

This command sets the Booster \$16 event to an intensity of 2 turns each with 35 bunches. This intensity ensures that the P1-P2 line BPMs have enough intensity to report reliable read backs. At this intensity, one must be cautious not to run beam continuously as radiation trips will result.

::: CHECK_DEVICE A:R2DDS1 SAVE_SET

Reads and saves the present setting of A:R2DDS1. This is the stabilizing RF frequency.

::: CHECK_DEVICE A:R2LLAM SAVE_SET

Reads and saves the value of A:R2LLAM. This is the stabilizing RF amplitude.

::: CHECK_DEVICE A:DPHATT SAVE_SET

Reads and saves the value of A:DPHATT. This is the Accumulator horizontal damper attenuator setting.

::: CHECK_DEVICE A:SCRES SAVE_SET

Reads and saves the value of A:SCRES. This is an Accumulator timing event.

::: ::: WAIT_DEVICE V:MSHOOT

The commands waits for the Main Injector transfer state parameter V:MSHOOT to equal 4. A state of 4 indicates that the Main Injector has finished the Main Injector reverse proton tune-up.

::: SPECTRUM_LOAD 2 7

Loads P41 file #7 to Spectrum Analyzer #2 at AP30. This is the unstacking display and can be viewed on CATV Pbar #28.

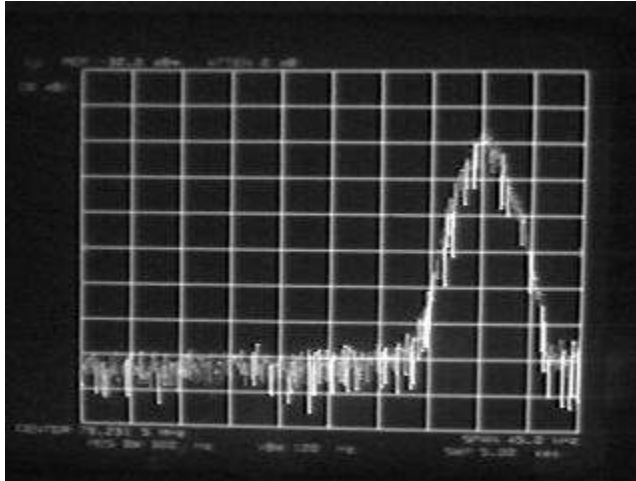


Figure 3-4

::: SEQ_PGM REQUEST Unstack SA

D

This is a bypassed command that is not needed at this time.

::: SEQ_PGM REQUEST AP0 Scope

D

This is a bypassed command that is not needed at this time.

::: SEQ_PGM REQUEST Acc Gap Mon

Starts the Pbar GBIP command editor program P188 (keeper is Jim Budlong). The Request qualifier tells the application to load file 6, which is used to setup the Accumulator AP10 gap monitor scope for capturing Pbar unstacking events. The P188 window automatically closes when the file load is complete. This is used for Pbar transfers and is not necessary for Reverse Protons.

::: ACKNOWLEDGE

Displays the following acknowledge command. It reminds the operator to start the emittance FTP (next command) on a different console.

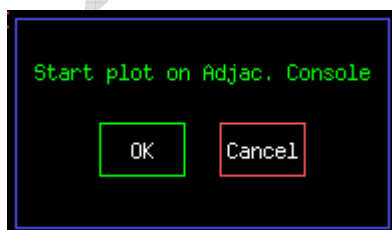


Figure 3-5

::: AUTO_PLOT Core Emittances

Reverse Proton Setup Procedures

Starts a Fast Time Plot to monitor emittances. Operators should monitor this plot while the Pbar experts do their studies.

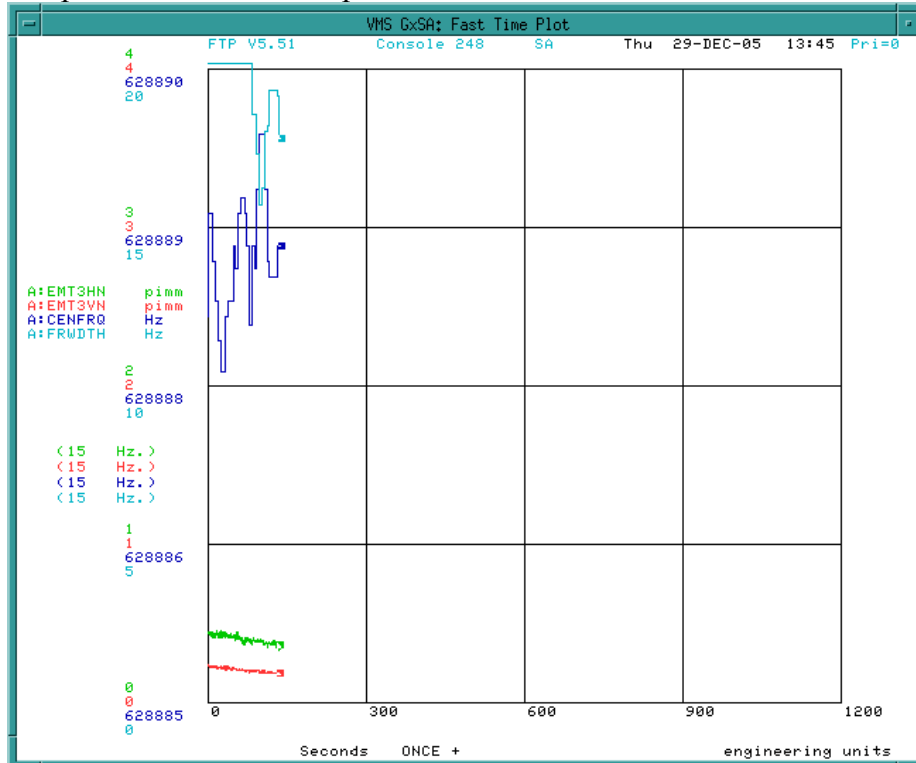


Figure 3-6

... START_PGM SA1127

Pbar Radiation Detector Display (keeper is Tony Leveling) is started on comfort display 102. This SA can be used during the beam line tune-up to verify that radiation levels are not high enough to cause a radiation trip. The program emulates the actions of the radiation detector cards. It updates every 60 seconds and takes a 15 minutes rolling average of the radiation losses and normalizes each radiation detector so that a value of 1 corresponds to the radiation trip level. The parameters for the individual radiation detectors can be found on D106 ACC/DEB <1> to <3>. G:RA{#####} is an integrating real-time read back of the radiation detector. Every 60 seconds, which is not concurrent with the supercycle, G:RA{#####} is reset to zero and starts integrating all over again. G:RD{#####} takes the number of G:RA{#####} before it is reset and keeps that value until G:RA{#####} is reset again. When doing the reverse proton tune-up later in the shot, if any radiation detector gets near to 1 on the plot, the beam switch should be taken to avoid a radiation trip. If the SA1127 plot dies, it can be restarted by reissuing this command, or manually through Acnet page P151. A screen capture of SA1127 is shown below.

Reverse Proton Setup Procedures

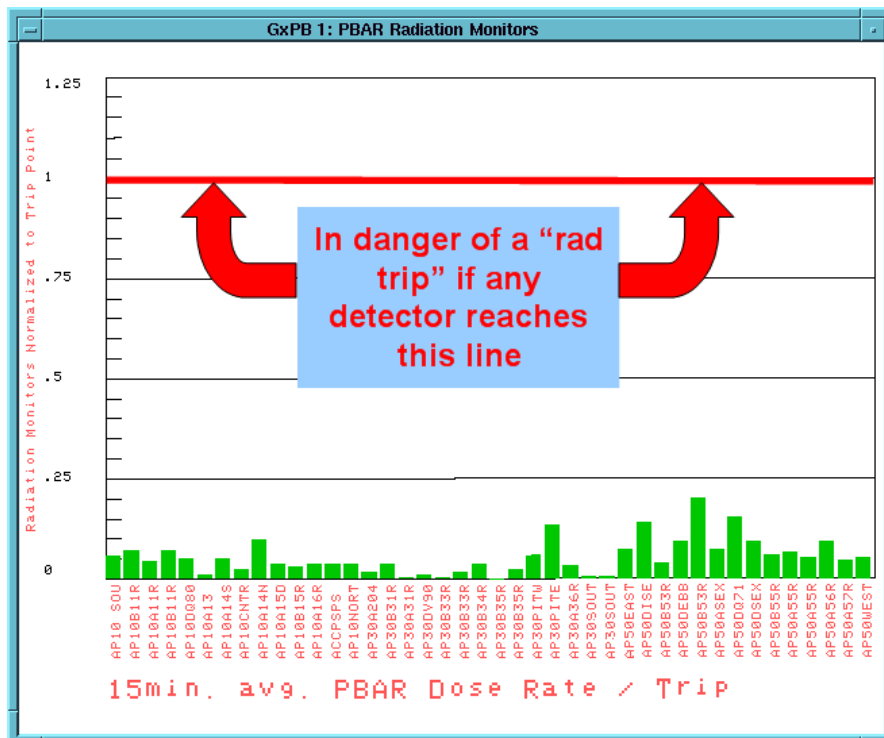


Figure 3-7

... BEAM_SWITCH Pbar_Source Off

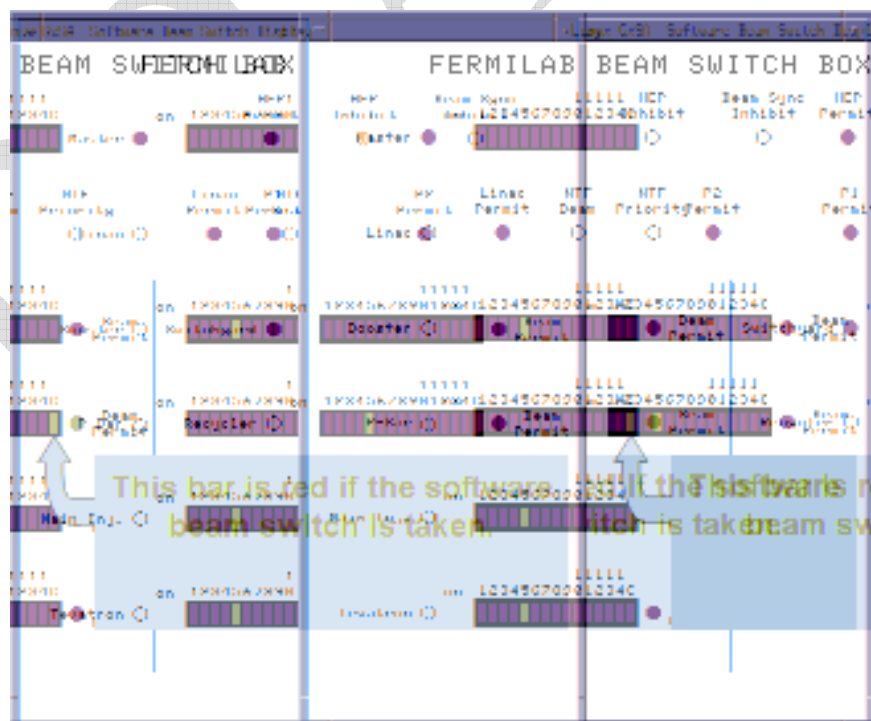



Figure 3-8

::: NOTIFY Start

Sends a Channel 13 Notify message to http://www-bd.fnal.gov/cgi-bin/notify_mes.pl?ch13=text

::: SET_ENUMERATED V:APSMOD

V:APSMOD is a state parameter representing the operational mode of the Pbar Source. The set_enumerated command asks the user to selected from a menu of V:APSMOD state values as shown below. When setting up for Reverse Proton Studies, the operator should chose state 8 = Reverse Protons.

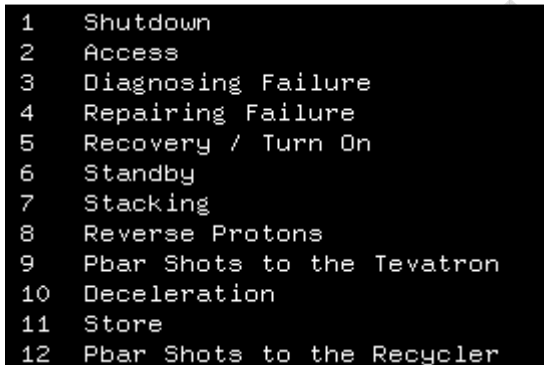

```
1 Shutdown
2 Access
3 Diagnosing Failure
4 Repairing Failure
5 Recovery / Turn On
6 Standby
7 Stacking
8 Reverse Protons
9 Pbar Shots to the Tevatron
10 Deceleration
11 Store
12 Pbar Shots to the Recycler
```

Figure 3-9

::: SHOT_LOG COMMENT

Adds the following comment to the Pbar portion of the shot log chapter. This is not necessary for Reverse Proton Studies.

 {Time}- Beginning shots to the Recycler, the starting stack size is ###.#####. – Sequencer

::: ABORT_MASK PBAR_SOFT ENABLED

This command enables the “PBAR_SOFT” Pbar abort mask. The logic is confusing, but when the abort mask is enabled, no aborts are seen.

This is the Pbar Software abort which is connected to the 204 module (viewed from P103) that monitors 120 GeV AP1 line power supply analog outputs. Since we are not running 120 GeV protons in the AP1 line when we do 8 GeV reverse proton studies, we can mask this entry.

::: ABORT_MASK AP1_120_PS ENABLED

Reverse Proton Setup Procedures

This command enables the “AP1_120_PS” Pbar abort mask. This abort monitors the digital status of the AP1 line 120GeV power supplies. Again, since we are not running 120GeV protons in the AP1 line while we are doing 8 GeV reverse proton studies, we can mask this entry.

::: INSTRUCT 206

D

This command is bypassed and not needed at this time.

::: ALARM_LIST PBAR 2

This command bypasses analog alarms for AP1 120 GeV power supplies.

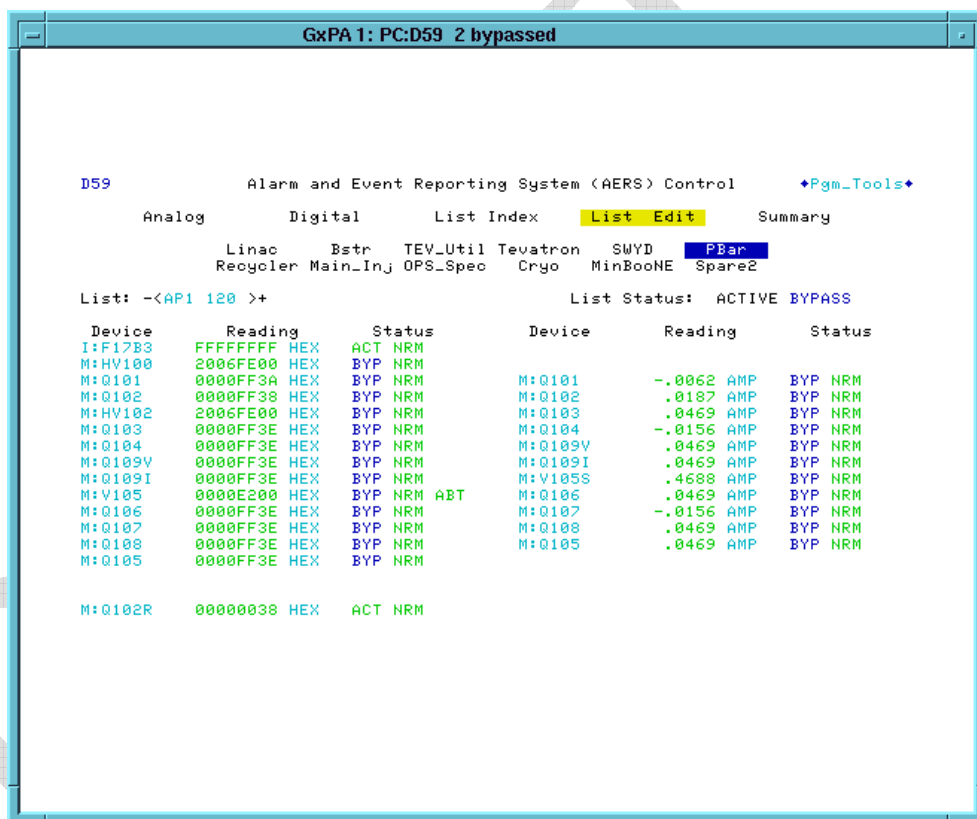


Figure 3-10

::: SET_SEQ FILE 37

This command turns off AP1 120 GeV power supplies. The devices that are turned off are M:HV100, M:Q101, M:Q102, M:HV102, M:Q103, M:Q104, M:Q105, M:V105, M:Q106, M:Q107, M:Q108, M:Q109I, M:Q109V, AND M:CSF23 (Ap1 trim bulk supply).

::: INSTRUCT 307

D

Reverse Proton Setup Procedures

This command is bypassed and not needed at this time.

::: SET_SEQ FILE_SR 79

D

This command is bypassed and not needed at this time.

::: SET_SEQ FILE 41

Sequencer File 41 sends resets to AP1 8 GeV supplies. This is done to clear any trip status prior to turning the devices on. The devices that are reset are I:F17B3, M:HV200, M:Q201, M:HV202, M:Q203, M:Q204, M:Q205, M:V205, M:Q206, M:Q207, M:Q208, M:Q209, M:CSF23, M:HT100D, M:VT101D, M:VT11AD, M:HT105D, M:HT107D, AND M:VT108D. I:F17B3 is located in the F2 service building, and the rest of the devices in this list are located in the F23 service building.

::: SET_SEQ FILE 42

Sequencer File 42 turns on AP1 8 GeV supplies. It also sets the polarity of M:Q102R negative. Devices that are turned on are I:F17B3, M:HV200, M:Q201, M:HV202, M:Q203, M:Q204, M:Q205, M:V205, M:Q206, M:Q207, M:Q208, M:Q209, M:CSF23, M:HT100D, M:VT101D, M:VT11AD, M:HT105D, M:HT107D, AND M:VT108D. I:F17B3 is located in the F2 service building, and the rest of the devices in this list are located in the F23 service building.

::: ALARM_LIST PBAR 12

This command enables the Pbar Alarm list entitled AP3. This alarm list is composed of the “AP3 DGTL” and “AP3 ANLG” alarm lists.

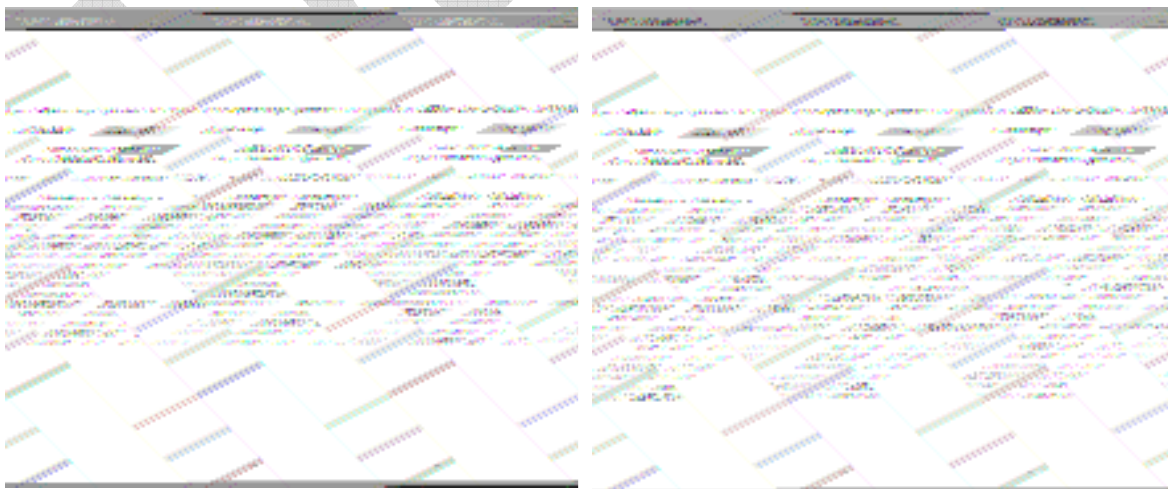


Figure 3-11

Reverse Proton Setup Procedures

::: EVENT 91 DISABLE

This command disables the TCLK event \$91, which the Pbar unstacking cycle reset.

::: WAIT_FOR SECS 10

Ten second wait.

::: CTL_DEVICE M:Q102 RESET

Issues a "reset" to M:Q102. M:Q102 was already issued a "reset" and "on" in file 41 above; however, it has a transfer switch that takes a finite amount of time to switch over. This command and the command that follows makes sure that M:Q102 is on before 8 GeV beam is run in the AP1 line.

::: CTLIT_DEVICE M:Q202 ON

Issues an "on" to M:Q102. . This command and the previous command help ensure that M:Q102 is on before 8 GeV beam is run in the AP1 line.

::: ALARM_LIST PBAR 3

Enables the D59 alarm list entitled "AP1 8GEV". We want to monitor the AP1 8 GeV line supplies when sending 8 GeV beam through the line.

Reverse Proton Setup Procedures

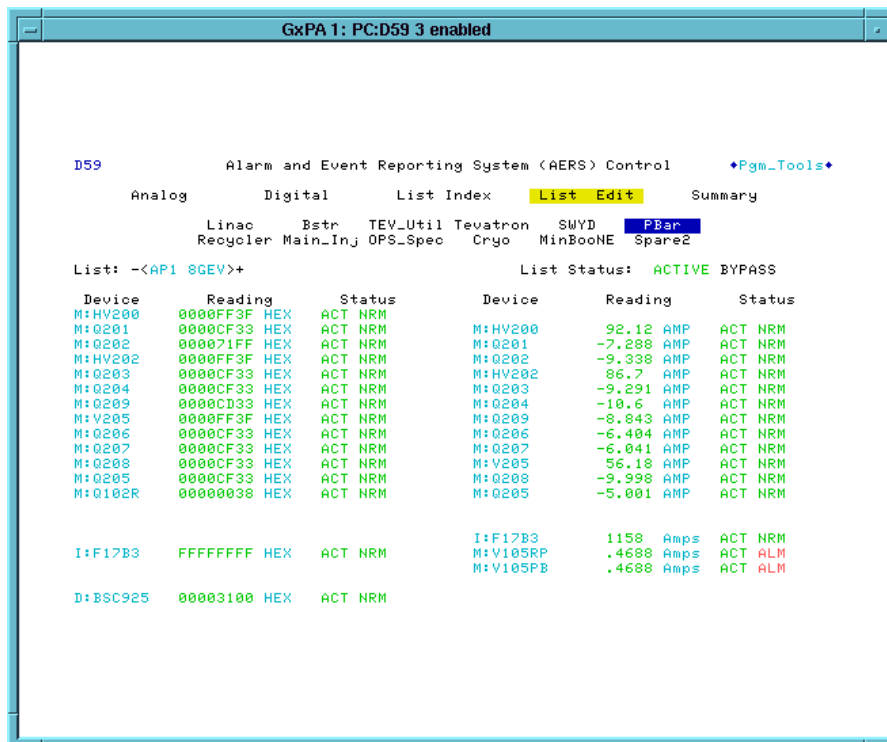


Figure 3-12

... SET_ENUMERATED V:APSMOD

D

This command is bypassed since it was moved earlier in the sequencer.

... LOAD_TLG 101 REPEAT

Loads Timeline #101. This is the timeline used for Recycler shots. It contains MiniBooNE and NuMI events. It has \$16/\$2D 8 GeV reverse proton events spaced 20 seconds apart. There is also an \$8E event prior to the first \$16/\$2D. This event is use to reset the fields in the P1 and P2 line magnets.

Reverse Proton Setup Procedures

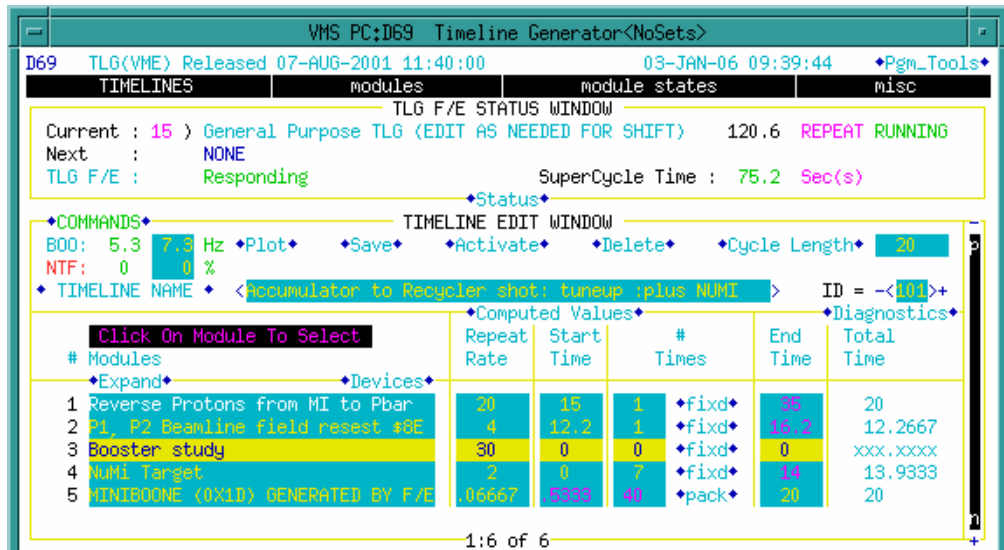


Figure 3-13

... ABORT_MASK AP1_8_PS DISABLED

This command disables the abort mask for AP1 8 GeV supplies. Now that we are about to run 8 GeV beam in the AP1 line, we want to pull the beam permit if any of those power supplies trip.

... EVENT 88 TRIGGER

Triggers TCLK event \$88.

... SETIT_DEVICE V:PSHOOT =4

D

This command is bypassed and not needed at this time.

... BEAM_SWITCH Pbar_Source On

D

This command is bypassed and not needed at this time.

... ALARM_LIST PBAR 52

Bypasses the D59 alarm list entitled "ARF1". ARF1 is used during stacking to move beam from the injection orbit to the deposition orbit. It is not needed for reverse proton studies.

Reverse Proton Setup Procedures

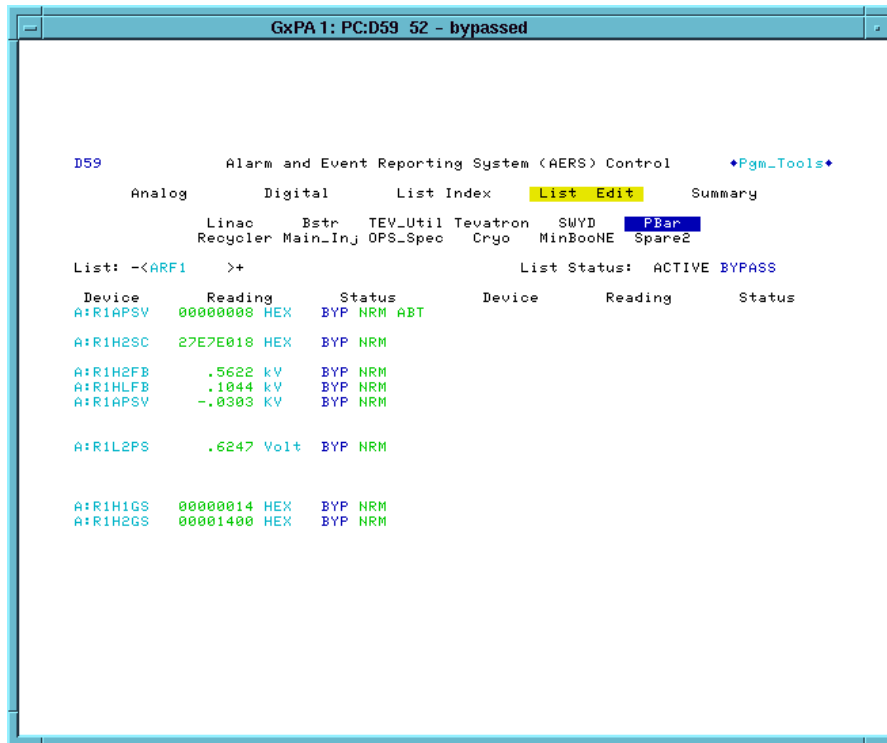


Figure 3-14

... WAIT_FOR SECS 3

A three second wait to ensure that the previous sequencer command finished before moving to the next command.

... ALARM_LIST PBAR 23

Bypasses the D59 alarm list entitled "PULSED" (pulsed devices).

Reverse Proton Setup Procedures

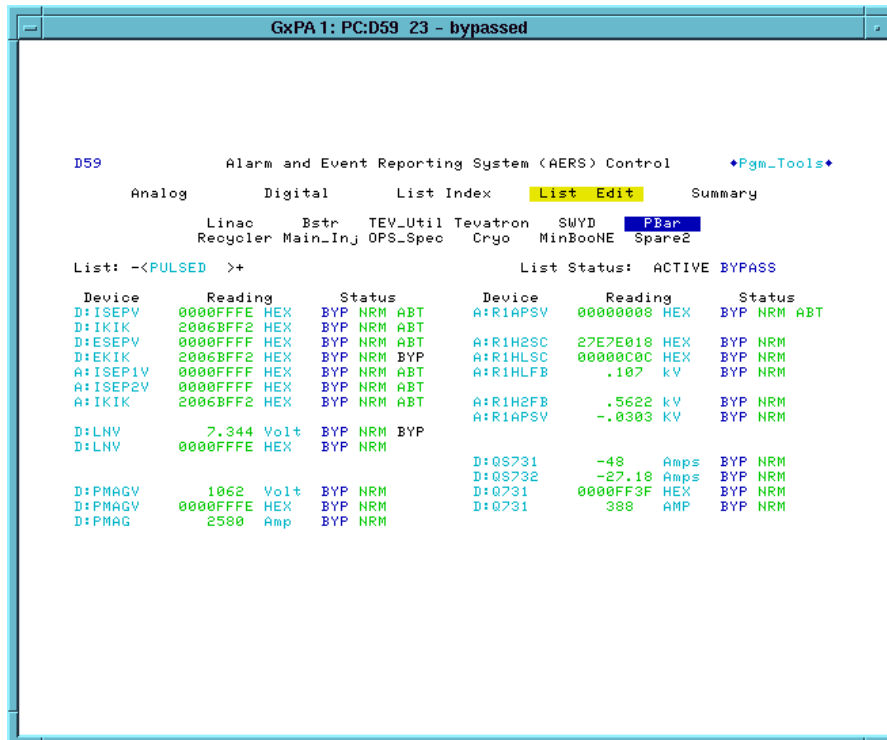


Figure 3-15

::: SET_SEQ FILE 1

This command turns off devices that had their alarms bypassed in the previous three commands. The pulsed devices (D:LNV, D:PMAGV, D:ISEPV, D:IKIK, D:EKIK, D:EKIKQ, D:ESEPV, D:ISEP1V, D:ISEP2V, and A:IKIK) and ARF1 devices (A:R1L1AM, A:R1L2AM, A:R1HLSC) turned off. In addition, A:EXTRAT is disabled, and A:EKIKTG is set to its reverse proton value.

::: SET_SEQ FILE 83

File #83 sets core horizontal and vertical 4-8 GHz cooling to gate off during reverse proton events injections. The on and off times (A:CBPON and A:CBPOFF) are both enabled and set to TCLK \$99 + 3 seconds and TCLK \$99 + 0 seconds respectively.

::: SET_SEQ FILE 85

File #85 is labeled RunIIB Misc. settings. It sets up the ARF1 fanback voltage and phase read back sample and hold trigger timers (A:R1HLT1 AND A:R1LLT3) both to be 1.575 seconds after a an Accumulator to Main Injector transfer event \$9A. It also sets up the ARF1 Accumulator to Main Injector frequency track and hold timer (A:R1LLT4) to be 0.000211 seconds after a an TCLK \$94. In addition, the file sets the

Reverse Proton Setup Procedures

Accumulator beam sample timers A:IBMS1 and A:IBMS2 to \$91 (or \$80) + .1 seconds and TCLK \$91 (or \$80) + 1 second respectively. Lastly, the file sets the Debuncher Extraction kicker septa charge timer. It changes it from \$80 + 0.4 seconds to \$90 + 0.00001 seconds.

::: CTL_DEVICE A:ISHUTO OFF

Turns off the accumulator injection shutter open timer. The Accumulator injection shutter will now not be told to open.

::: CTL_DEVICE A:ESHUTO OFF

Turns off the accumulator extraction shutter open timer. The Accumulator extraction shutter will now not be told to open.

::: CTL_DEVICE A:ISHUTC ON

Turns on the accumulator injection shutter close timer. The shutter open timer was disabled and the shutter closed timer was enabled. This ensures that the Accumulator Injection shutter stays closed. The Accumulator injection shutter position can be verified by looking at A:ISHTST. A reading of 1 means open and a reading of 2 means closed.

::: CTL_DEVICE A:ESHUTC ON

Turns on the accumulator extraction shutter close timer. The shutter open timer was disabled and the shutter closed timer was enabled. This ensures that the Accumulator Extraction shutter stays closed. The Accumulator extraction shutter position can be verified by looking at A:ESHTST. A reading of 1 means open and a reading of 2 means closed.

::: START_PGM SA1144

::: START_PGM SA1144

Starts the Stack-o-meter SA (keeper is David Sutherland) on comfort display console 101. If this plot dies, it can easily be restarted as follows. From CNS1, do a CNTL-SHIFT-4 to get to the CNS101 comfort display. Go to P69 and then click PLOT!! under the lifetime category. Operators should use this display to help monitor the Accumulator while the Pbar Experts are doing their reverse proton studies.

::: INSTRUCT 302

Instruct 302 informs the Operator that the VSA SA should be run on Slot GxSC. Unless otherwise instructed from Pbar Experts, operators should

Reverse Proton Setup Procedures

continue to run the VSA during Pbar studies to monitor the frequency width.

```
Start the VSA display on this console using slot C.  
Select concole [Lc1] and target slot GxSC.  
  
Interrupt anywhere in this box to continue.
```

Figure 3-16

```
:::  
::: SET_DEVICE A:VSARST=9
```

A:VSARST is set to 9, which terminates any existing instances of the VSA.

```
::: WAIT_DEVICE A:VSARST
```

Waits for VSA reset to complete.

```
::: START_PGM SA1156 D
```

This command is bypassed and not needed at this time. This command and the next command are the two versions of the VSA code. As the code is developed, we at times switch between the two SAs.

```
:::  
::: START_PGM SA1136
```

Accumulator Momentum profile using the VSA (keeper is Dave McGinnis). This is normally run on the SC screen of the console that runs the Pbar Sequencer, and can be restarted from P142. SA1136 calculates the center frequency (A:CENFRQ) and frequency width (A:FRWDTH) of the Accumulator beam. If the momentum cooling is being run too hard, you will see a coherent spike on the display. If bad enough, the coherent spike can be larger than the plot scale. This is in indication of an instability, and it also effects the VSA calculations (for example, it makes the frequency width artificially small). If coherent spikes are seen on the trace, you can lower the 2-4GHz momentum power until the spike goes away. A:SPIKE is a datalogged parameter that measures how bad the coherent spike is on the VSA display. Values above 20% can indicate excessive coherent spikes on the display. Below is a typical SA1136 display that is not exhibiting coherent spike problems.

Reverse Proton Setup Procedures

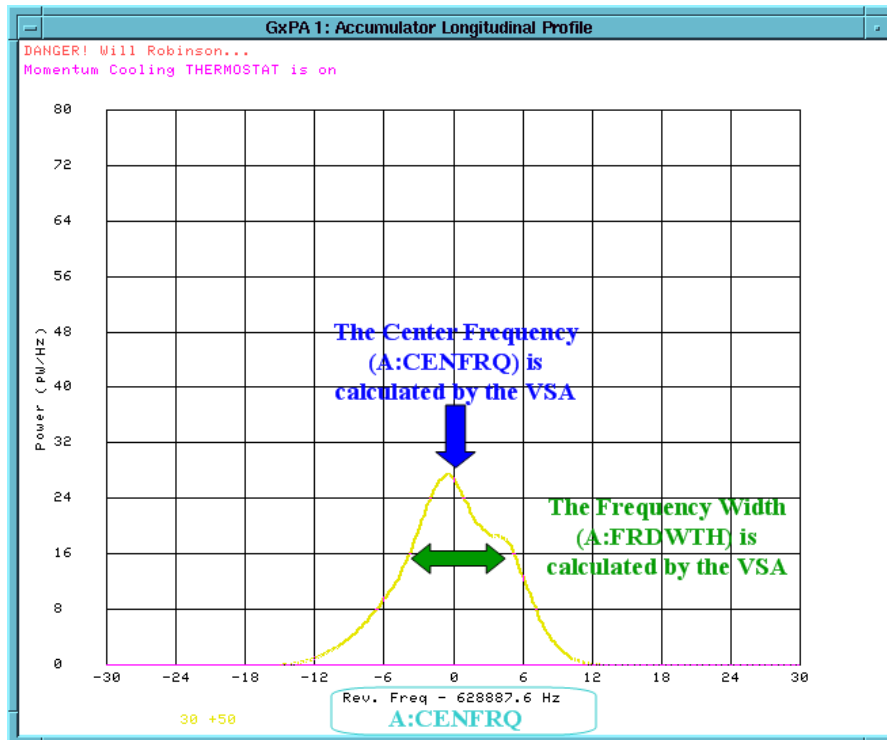


Figure 3-17

What if the VSA plot does not start? Occasionally the VSA does not start. When that is the case, follow the directions in the Pbar Elog at http://www-bd.fnal.gov/cgi-mach/machlog.pl?nb=pbar04&action=view&page=19&anchor=174245&hilit=17:42:45-%20target=_top to configure the VSA.

... WAIT_FOR SECS 15

A fifteen second delay to ensure that the VSA SA starts.

... ACL SET_FROM_READING

... SET_DEVICE A:VSAFWD -=5

Lowers the desired accumulator frequency width by 5Hz..

... SETIT_DEVICE A:DTMHVE =.5

Sets the horizontal minus vertical emittance difference for VSA vertical thermostat. If the VSA is in momentum and vertical thermostat mode (A:VSARST = 7), then this parameter would be used to determine when to turn off the vertical cooling. When running in this mode, if the difference

Reverse Proton Setup Procedures

between the horizontal and vertical emittances becomes greater than A:DTMHVE, then the vertical cooling is gated off.

::: SETIT_DEVICE A:VSARST =6

This puts the VSA in a momentum thermostat mode that is based on running both the 2-4 GHz and the 4-8 GHz momentum cooling systems. This is similar to the stacking momentum thermostat. The difference is this thermostat regulates on A:VSAFWD instead of A:CMFRWD[x].


On initialization it moves the 4-8 GHz arrays to the alignment position A:CMARPI without asking the operator to check TV Ch. 20 (The value A:CMARPI was set during the last time the momentum stacking thermostat was initialized). It starts with the last used PIN attenuator setting. When the 4-8 GHz attenuator reaches its max value it shuts off both the 2-4 GHz and 4-8 GHz momentum systems (unlike the stacking thermostat which just shuts off the 4-8 GHz momentum system.) When turning on the 4-8 GHz system it also turns on the 2-4 GHz system.

::: CHECK_DEVICE A:VSAFWS READING

Checks the analog reading of A:VSAFWS and displays the results in the message window. This command is configured with the number of tries equal to zero, which means that no checks are made. A:VSAFWS is the suggested desired frequency based on stack size.

```
Jan-03-2006 14:18:14 COM: A:VSAFWS present value = 16.752293
```

::: INSTRUCT 303

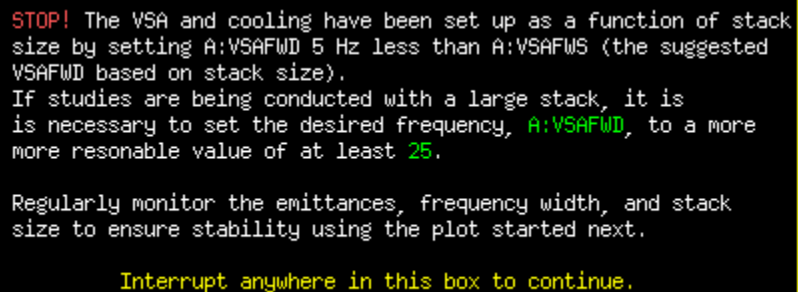

STOP! The VSA and cooling have been set up as a function of stack size by setting A:VSAFWD 5 Hz less than A:VSAFWS (the suggested VSAFWD based on stack size). If studies are being conducted with a large stack, it is necessary to set the desired frequency, A:VSAFWD, to a more reasonable value of at least 25.

Regularly monitor the emittances, frequency width, and stack size to ensure stability using the plot started next.

Interrupt anywhere in this box to continue.

Figure 3-18

::: CUSTOM COOL_GAIN

Sets core cooling PIN attenuators to values obeying an equation $\text{mult}(i) * (\text{A:IBEAMB}) + \text{offset}(i)$. The constants “offset” and “mult” are

Reverse Proton Setup Procedures

stored in a table maintained by the AD\Pbar department. Custom cooling gain usually undershoots cooling power for larger stacks.

```
Jan-03-2006 14:18:22 COM: scaled gain settings with: 67.8899 * 1.0000
```

```
::: SET_DECICE A:DPHATT =5
```

Sets the Horizontal Damper attenuator setting to 5dB.

```
::: SET_DEIVCE A:SCRES +=1.8
```

Increments A:SCRES by 1.8 seconds. During stacking, A:SCRES is normally set to \$80 (or \$85 or \$93) + 0.504 seconds.

```
::: ALARM_LIST PBAR 76
```

Bypasses the D59 alarm list entitled “DEB COOL” (Debuncher Cooling). This list contains a number of other lists.

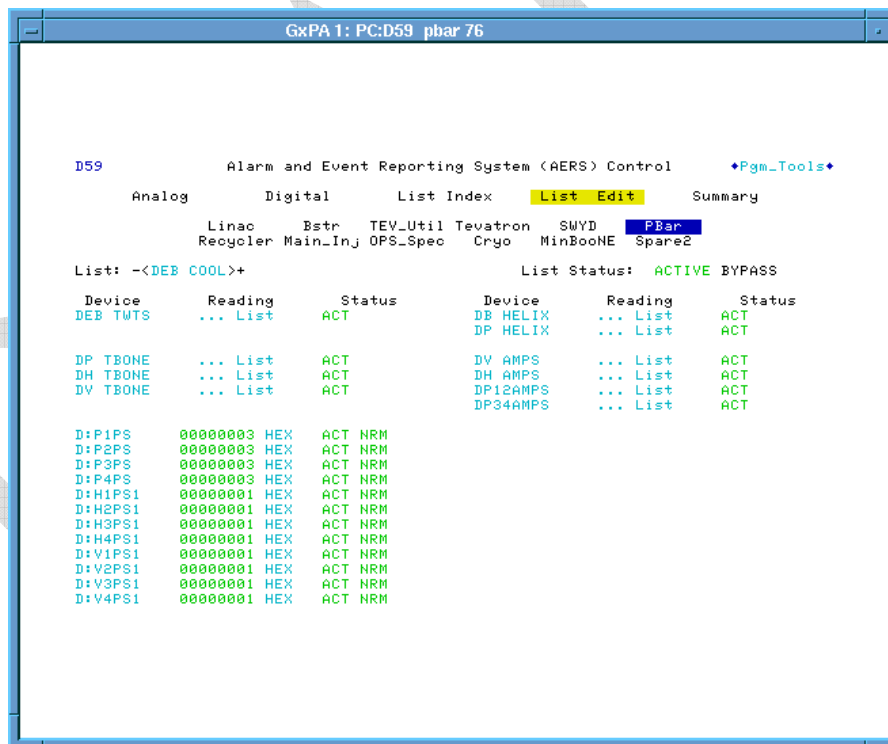


Figure 3-19

```
::: SET_SEQ FILE 92
```

Reverse Proton Setup Procedures

File #92 opens the Debuncher cooling PIN switches to turn off the Debuncher cooling during the shot setup. The PIN switches that are turned off are D:H1PS1, D:H2PS1, D:H3PS1, D:H4PS1, D:V1PS1, D:V2PS1, D:V3PS1, D:V4PS1, D:P1PS1, D:P2PS1, D:P3PS1, AND D:P4PS1.

b. Pbar Annex Sequencer: Fast Recycler Reverse Protons

We next move on to the second aggregate in the Pbar Annex sequencer.

::: ACKNOWLEDGE



::: CTLIT_DEVICE A:SPPS01 OFF

Turns off the stacktail pin switch. With the Accumulator beam cooled into the core, we no longer need to run the stacktail.

::: SET_SEQ FILE 28

File 28 turns off stacktail high level amps. The devices that are turned off are A:SPAH11, A:SPAH12, A:SPAHD1, A:SPAHD1, A:SPAHD2, A:SPAHD3, A:SPAHD4.

::: SET_SEQ FILE 94

File 94 turns on power leveling and sets the diode voltage for the core horizontal and vertical transverse systems. The devices that are modified are A:CH1D1, A:CH2D1, A:CH3D1, A:CV1D1, A:CV2D1, and A:CV3D1. With power leveling enabled, changing the PIN attenuators does not change the power. To change the power the diode voltages need to be modified. The diode voltages can be found on P36 CORE_M_&_B <39>.

::: SET_SEQ FILE 30

Reverse Proton Setup Procedures

File 30 sets the 2-4GHz momentum cooling attenuation level. It also turns on and enabled digital alarms for the 4-8GHz cooling system. The devices that are modified are A:CPPA01, A:CMTW01, AND ACMTW02.

::: CTLIT_DEVICE A:CMTW01 ON

This command turns on 4.8 GHz momentum TWT #1. This is a repeat of the same command in file #30 above. The command is issued a second time to ensure that the TWT get turned on.

::: CTLIT_DEVICE A:CMTW02 ON

This command turns on 4.8 GHz momentum TWT #2. This is a repeat of the same command in file #30 above. The command is issued a second time to ensure that the TWT gets turned on.

:::
::: CHECK_DEVICE A:ISHTST READING

Verifies that A:ISHTST is reading 2, which means that the Accumulator injection kicker shutter is closed. A:ISHTST has two readings: 1 = shutter is open, 2= shutter is closed.

Keeping the shutters closed minimizes any impact that the Reverse Proton beam will have on the Pbar stack.

::: CHECK_DEVICE A:ESHTST READING

Verifies that A:ESHTST is reading 2, which means that the Accumulator extraction kicker shutter is closed. A:ESHTST has two readings: 1 = shutter is open, 2= shutter is closed.

Keeping the shutters closed minimizes any impact that the Reverse Proton beam will have on the Pbar stack.

::: CHECK_DEVICE A:R2HLSC ON

D

This command is bypassed and not needed at this time.

::: CHECK_DEVICE A:R3HLGS ON

Verifies that A:R3HLGS is “on,” which means that the ARF3 cavity short is in.

::: ALARM_LIST PBAR 38

Reverse Proton Setup Procedures

Bypasses the “CORE HOR” alarm list.

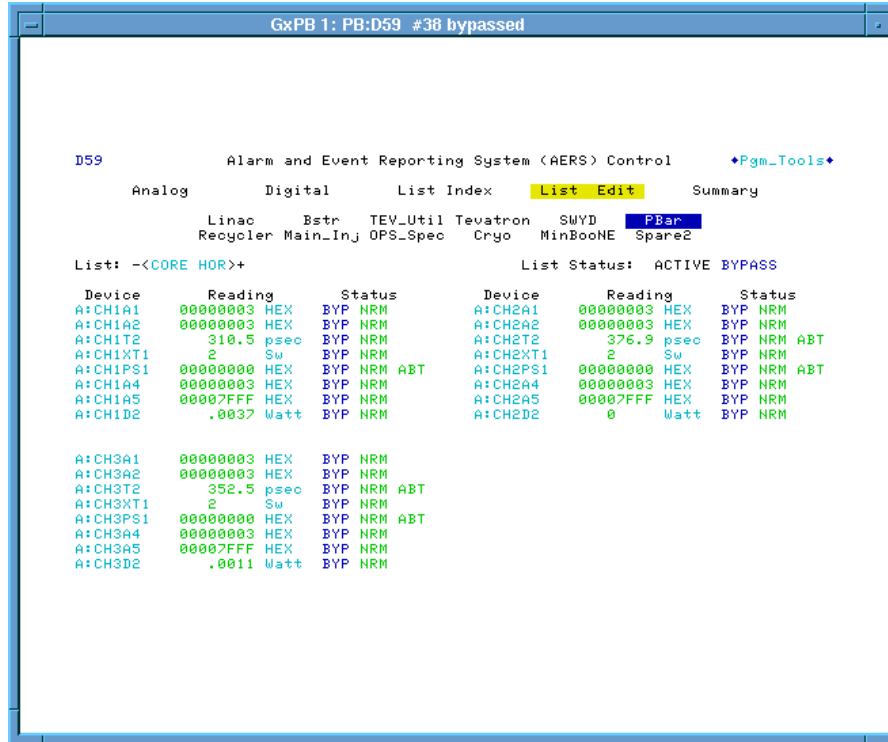


Figure 3-20

... CHECK_DEVICE A:FRWDTH READING

Displays the current value of A:FRWDTH (frequency width) in the message box.

Jan-03-2006 14:19:32 COM: A:FRWDTH present value = 21.750000

...
... SETIT_DEVICE A:VSARST =3

D

This command is bypassed and not needed at this time.

... ACKNOWLEDGE

D

This command is bypassed and not needed at this time.

... WAIT_FOR SECS 20

D

This command is bypassed and not needed at this time

... WAIT_DEVICE A:VSARST

D

Reverse Proton Setup Procedures


This command is bypassed and not needed at this time

```
::: SETIT_DEVICE A:VSARST =7
```

D

This command is bypassed and not needed at this time

```
::: ACKNOWLEDGE
```

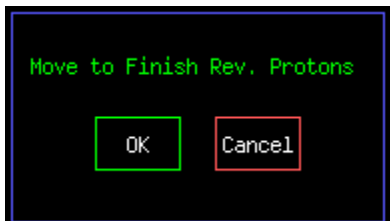

c. Pbar Annex Sequencer: Fast Recycler Finish Reverse Protons

We next move on to the third aggregate in the Pbar Annex sequencer.

```
::: SHOT_LOG COMMENT
```

Adds a comment to the Pbar portion of the Recycler shot scrapbook.

14:22:25- Finishing reverse proton tune up. The stack size is {A:IBEAMB}. - Sequencer

```
:::
```

```
::: EVENT 9C DISABLE
```

Disables the TCLK \$9C event. This is the sudden beam loss event, which triggers and annunciation and stops the power supply transient recorders. Since unstacking events would be misinterpreted as a sudden beam loss in the Accumulator, the \$9C is disabled for the duration of the Recycler transfers.

```
::: BEAM_SWITCH Pbar_Source Off
```

Turns off the Pbar Software Beam Switch to prevent beam from being injected.

```
::: BOOST_INTENSITY EVT16 1
```

Sets the \$16/\$2D events to 1 turn, 10 bunches. Prior to 2006, we had to run 35 bunches for the P1 and P2 line BPMs.

Reverse Proton Setup Procedures

::: CTLIT_DEVICE D:BSC925 ON

Pulls out the AP3 beam stop which will allows us to send reverse protons up the AP3 line to the Accumulator.

:::
::: CTLIT_DEVICE D:ESEPV ON

We will take reverse protons all of the way to the Debuncher. We will now selectively turn on the pulsed devices that allow this to happen. We first turn on the Debuncher Extraction septum power supply. In reverse proton direction, this is injection into the Debuncher from the D/A line.

::: CTLIT_DEVICE A:ISEP1V ON
::: CTLIT_DEVICE A:ISEP2V ON

Turns on the Accumulator Injection Septum. In reverse proton direction, this is Accumulator Extraction to the D/A line.

:::
::: CTLIT_DEVICE A:EKIK ON

Turns on the Accumulator Extraction kicker. In reverse proton direction, the is Accumulator injection from the AP3 line.

::: CTLIT_DEVICE A:EKIKQ ON

D

This command is bypassed and not needed at this time

::: EVENT 88 TRIGGER

Triggers TCLK event \$88.

::: AUTO_PLOT Beamline tuneup

Starts a FTP as shown below. The plot shows the Main Injector intensity, AP1 line intensity, AP3 line intensity and Accumulator beam intensity. The plot is triggerd from 0 to 4 seconds on a \$93.

Figure 3-21

⋮ BEAM SWITCH Pbar Source On

This enables the software beam switch. Once all of the hardware beam switches are enabled, we should be able to take beam.

Figure 3-22

Reverse Proton Setup Procedures

::: INSTRUCT 231

D

This command is bypassed and not needed at this time

::: START_PGM P150

D

This command is bypassed and not needed at this time. The above two commands are only used when using P150 to tune-up the beamlines.

::: INSTRUCT 214

Instruct 214 has us check the transfer efficiency. Take a pulse of beam. If the efficiency from Main Injector to the AP3 line (D:TOR910) is less than 75%, then we need to unbypass and run the two previous sequencer commands. By continuing past this instruct, we are saying that the beamline tune-up is complete. We will next move on to the turn by turn tune-up.

```
If it is necessary to do a beam line tune up with P150, hold the
Sequencer here until complete. Reasons to do a beam line tune up are
an explicit request and/or poor MI to TOR910 efficiency (<75%).
Continuing from this point lowers the intensity and initiates the
Accumulator Turn-by-Turn tune-up application.

Interrupt anywhere in this box to continue.
```

::: BEAM_SWITCH PBAR_SOURCE OFF

The Pbar beamswitch is turned off so that we do not take bema.

::: SETIT_DEVICE V:PSHOOT =7

Sets the state parameter V:PSHOOT to 7, then pauses long enough to verify that the setting was completed successfully. State 7 is defined as "Pbar Beamline Tuneup Complete."

:::

::: ACKNOWLEDGE

D

This command is bypassed and not needed at this time

::: BOOST_INTENSITY EVT16 1

Reverse Proton Setup Procedures

Sets the \$16/\$2D events to 1 turn, 10 bunches, which was already set in an earlier step.

This command is present for historical reasons. Prior to 2006, we had to run 35 bunches for the P1 and P2 line BPMs to complete the beamline tune-up and could use 10 bunches for the Accumulator BPMs for the turn by turn tune-up. Running 35 bunches continuously would result in a Pbar rad trip. As a result we ran the 35 bunches for the beamline tuneup, and then backed down to 10 turns for the turn by turn. We can now run 10 bunches continuously without rad tripping and all BPM can be used at 10 turns. The result is that we can run all of our entire tune-up at 10 turns.

::: BEAM_SWITCH Pbar_Source On D

This command is bypassed and not needed at this time

::: INSTRUCT 316

P162 is about to be started to minimize Accumulator Turn-by-Turn oscillations. Strive to achieve data points within the innermost circle of the bulls-eye plot.

Interrupt anywhere in this box to continue.

::: AUTO_PLOT TBT eff D

This command is bypassed and not needed at this time. We used to run different intensities on beamlines and turn by turn tune-ups. As a result, we used to need differently scaled plots. Since the intensity does not change, we can run the same plot for the entire tune-up process.

::: START_PGM P162

Starts the turn by turn application. The application waits for a TCLK event \$93 to fire, and then takes horizontal and vertical turn by turn data.

Reverse Proton Setup Procedures



Figure 3-23

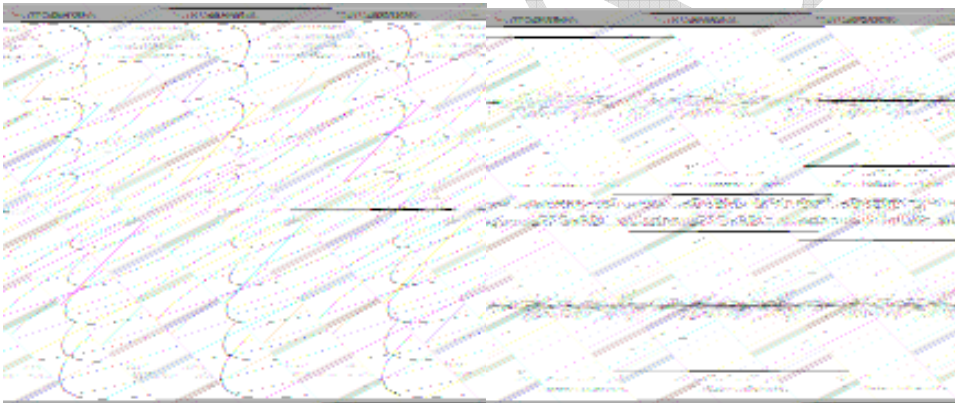


Figure 3-24

... BEAM_SWITCH Pbar_Source On

Enables the software beam switch to take beam for the turn by turn tune-up.

... INSTRUCT 215

Reverse Proton Setup Procedures

Once TBT tuning is complete, continue in the Sequencer to automatically save the TBT plots. DO NOT terminate P162 until after the plots are saved.
When prompted, select the Reverse Proton Fast Time Plot to save as well.

Interrupt anywhere in this box to continue.

Figure 3-25

::: ACKNOWLEDGE



::: COPY_SCREEN LCL MY SLOT
::: COPY_SCREEN LCL MY SLOT
::: SHOT_LOG IMAGE

The above three commands copy the tune-up plots to D5 save and to the Recycler shot scrapbook. Since this is not needed for Reverse Proton studies, these steps can be skipped. Below are the plots that are copied to the shot scrapbook.

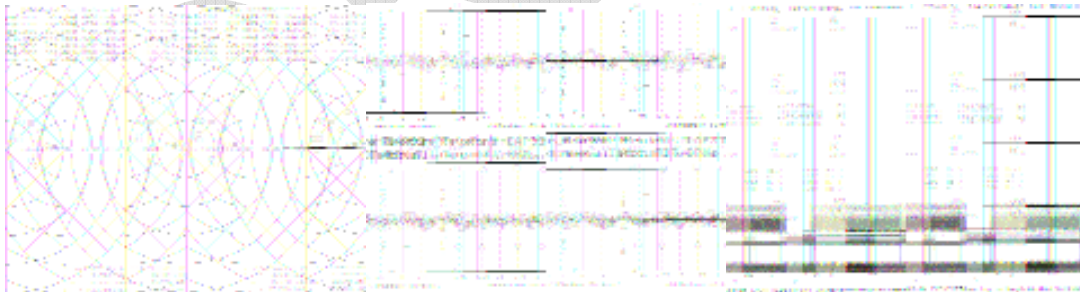


Figure 3-26

::: SHOT_LOG Comment

Pastes the following comment into the Recycler Shot scrapbook. This step can be skipped for Reverse Proton studies.

HH:MM:SS- Reverse proton tuning is complete. – Sequencer

::: BEAM_SWITCH Pbar_Source Off

Reverse Proton Setup Procedures

Turns off the Pbar beam switch so that we stop taking beam.

:::
::: CHECK_DEVICE A:CENFRQ READING

Checks the reading for A:CENFRQ (Accumulator Center Frequency) and displays the value in the messages window. This command does not wait for a nominal value, it just makes the reading.

```
Jan-10-2006 11:27:22 COM: A:CENFRQ present value = 628891.687500
```

::: CHECK_DEVICE A:VFACCM READING

Checks the reading of A:VFACCM (Main Injector Frequency to Accumulator) and displays the value in the messages window. This command does not wait for a nominal value, it just makes the reading.

```
Jan-10-2006 11:27:22 COM: A:VFACCM present value = 628763.500000
```

::: SET_DEVICE A:RLLEXF =628767.50

Sets the ARF4 extraction frequency to 628767.5 Hz. This is not needed for reverse proton studies.

:::
::: CTLIT_DEVICE A:EKIK ON

Issues an “on” to the Accumulator Extraction kicker, which should already be on. In reverse proton direction, there is Accumulator injection from the AP3 line. This is to ensure that any reverse proton beam gets kicked out of the Accumulator before proceeding.


::: CTLIT_DEVICE A:EKIKQ ON

D

This command is bypassed and not needed at this time

::: ACKNOWLEDGE

Reverse Proton Setup Procedures

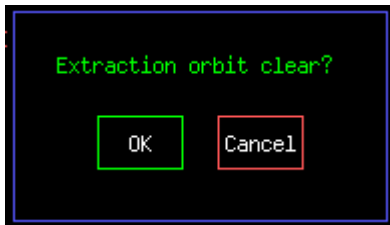

```
::: CTLIT_DEVICE A:EKIK OFF
```

D

This command is bypassed and not needed at this time.

```
::: CTLIT_DEVICE A:EKIK OFF
::: CTLIT_DEVICE A:IKIK OFF
::: CTLIT_DEVICE A:ISEP1V OFF
::: CTLIT_DEVICE A:ISEP2V OFF
::: CTLIT_DEVICE D:IKIK OFF
::: CTLIT_DEVICE D:ESEPV OFF
```

Now that beam is out of the machine, we will turn off Accumulator and Debuncher pulsed devices.

```
::: CHECK_DEVICES A:SCRES RESTORE
```

The A:SCRES timer is restored to the value that was saved with the *CHECK_DEVICE A:SCRES SAVE_SET* command in the Fast Recycler Shot aggregate.

```
::: SET_DEVICE D:H926PB D:H9267RP
::: SET_DEVICE M:V105PB M:V105RP
::: SET_DEVICE M:H100PB M:H100RP
::: SET_DEVICE M:V101PB M:V101RP
::: SET_DEVICE M:V11APB M:V11ARP
::: SET_DEVICE M:H105PB M:H105RP
::: SET_DEVICE M:H107PB M:H107RP
```


AP1 and AP3 ramped devices have three ramps flattop values as shown below (M = M or D, H = H or V, ### = location, and two letters at the end indicating the ramp type):

- M:H###RP: 8 GeV Reverse Protons
- M:H###PB: 8 GeV Pbars
- M:H###ST: 120 GeV Stacking


If a beamline tuneup was done, then the Reverse Proton ramps on AP1 and AP3 ramped devices may have changed. Ideally the 8 GeV reverse proton values and the 8 GeV Pbar values are the same, so the above commands copy the reverse proton values into the 8 GeV pbar values.

Reverse Proton Setup Procedures

... ACKNOWLEDGE

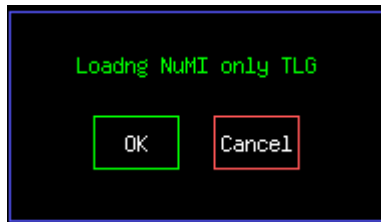


... LOAD_TLG 103 REPEAT

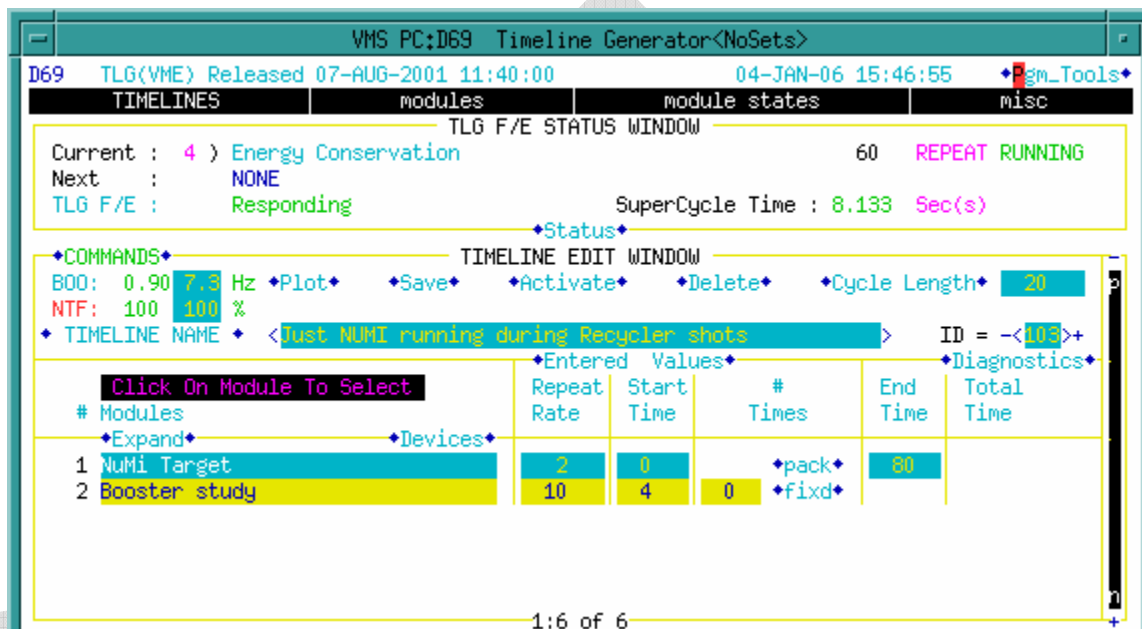

The timeline now has only NuMI events. This is the timeline normally used during Recycler shots. During Reverse Proton studies we can change the timeline to fit current needs. We will have the option to either run one-shots, or change the timeline to have dedicated \$16/\$2D events for reverse protons.

Reverse Proton Setup Procedures

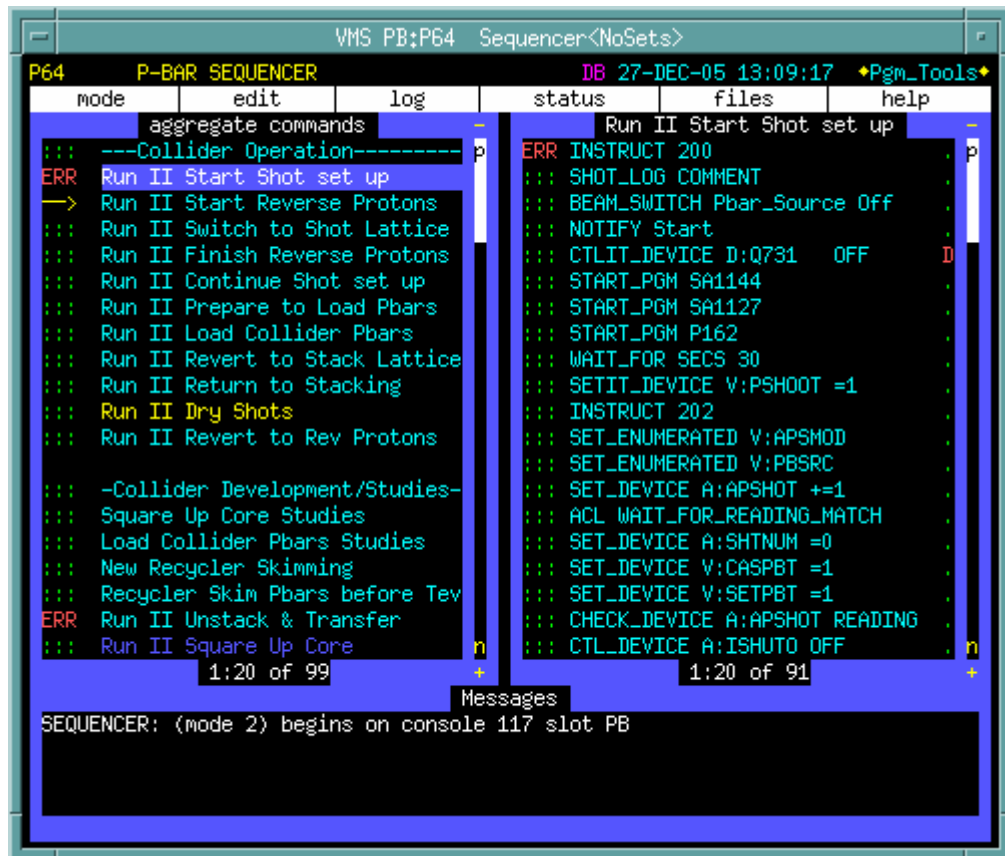

```
VMS PB:P64 Sequencer<NoSets>
P64 P-BAR SEQUENCER DB 27-DEC-05 13:09:17 Pgm_Tools
mode edit log status files help
aggregate commands Run II Start Shot set up
---Collider Operation-----
ERR Run II Start Shot set up
-> Run II Start Reverse Protons
Run II Switch to Shot Lattice
Run II Finish Reverse Protons
Run II Continue Shot set up
Run II Prepare to Load Pbars
Run II Load Collider Pbars
Run II Revert to Stack Lattice
Run II Return to Stacking
Run II Dry Shots
Run II Revert to Rev Protons
-Collider Development/Studies-
Square Up Core Studies
Load Collider Pbars Studies
New Recycler Skimming
Recycler Skim Pbars before Tev
ERR Run II Unstack & Transfer
Run II Square Up Core
1:20 of 99
Messages
SEQUENCER: (mode 2) begins on console 117 slot PB
Run II Start Shot set up
ERR INSTRUCT 200
SHOT_LOG COMMENT
BEAM_SWITCH Pbar_Source Off
NOTIFY Start
CTLIT_DEVICE D:Q731 OFF
START_PGM SA1144
START_PGM SA1127
START_PGM P162
WAIT_FOR SECS 30
SETIT_DEVICE V:PSHOOT =1
INSTRUCT 202
SET_ENUMERATED V:APSMOD
SET_ENUMERATED V:PBSRC
SET_DEVICE A:APSHOT +=1
ACL WAIT_FOR_READING_MATCH
SET_DEVICE A:SHTNUM =0
SET_DEVICE V:CASPBT =1
SET_DEVICE V:SETPBT =1
CHECK_DEVICE A:APSHOT READING
CTL_DEVICE A:ISHUTO OFF
1:20 of 91
```

Figure 3-27

It is at this point that we vary from our Recycler Shots path. We will now switch to the Pbar Sequencer to establish the Reverse Proton Beam to the Debuncher.

From the Pbar Annex Sequencer, click on the menu bar item “mode” in the upper left corner of the screen. Select the Pbar Annex (Mode 17) from the selection menu.

d. Pbar Sequencer: Reverse Protons to the Debuncher

```
::: ACKNOWLEDGE
::: SET_SEQ FILE 90
::: CHECK_DEVICE D:R1HT02 SAVE_SET
::: CHECK_DEVICE D:R1HT03 SAVE_SET
::: CHECK_DEVICE D:R1HT04 SAVE_SET
::: CHECK_DEVICE D:R1HT05 SAVE_SET
::: CHECK_DEVICE D:R1HT06 SAVE_SET
::: CHECK_DEVICE D:R1HT07 SAVE_SET
```

Reverse Proton Setup Procedures

```

::: SET_DEVICE D:R1HT02
::: SET_DEVICE D:R1HT03
::: SET_DEVICE D:R1HT04
::: SET_DEVICE D:R1HT05
::: SET_DEVICE D:R1HT06
::: SET_DEVICE D:R1HT07
::: ACKNOWLEDGE
::: BOOST_INTENSITY EVT16 1
::: ALARM_LIST PBAR 72
::: WAIT_FRO SECS 5
::: ALARM_LIST PBAR 76
::: ACL SET_FROM_READING
::: SETIT_DEVICE A:VSARST =5
::: CTL_DEVICE A:R1HLSC RESET
::: CTLIT_DEVICE A:R1HLSC ON
::: SETIT_DEVICE A:EKIKTG =13.8365
::: CHECK_DEVICE D:IKIKP SAVE_SET
::: CHECK_DEVICE D:AP10T0 SAVE_SET
::: CHECK_DEVICE D:DAP2X SAVE_SET
::: CHECK_DEVICE D:R1LLT4 SAVE_SET
::: CTLIT_DEVICE A:ISHUTO OFF
::: CTLIT_DEVICE A:ESHUTO OFF
::: CTLIT_DEVICE A:ISHUTC ON
::: CTLIT_DEVICE A:ESHUTC ON
::: WAIT_DEVICE A:ISHTST
::: WAIT_DEVICE A:ESHTST
::: CTL_DEVICE A:EKIK ON
::: CTL_DEVICE A:IKIK ON
::: CTL_DEVICE A:ISEP1V ON
::: CTL_DEVICE A:ISEP2V ON
::: CTL_DEVICE D:EKIK ON
::: CTL_DEVICE D:ESEPV ON
::: CTL_DEVICE D:Q731 RESET
::: CTL_DEVICE D:Q731 ON
::: ACKNOWLEDGE
::: CTLIT_DEVICE D:VAREVT ON
::: CHECK_DEVICE A:SCRES SAVE_SET
::: SET_DEVICE A:SCRES +=2
::: FTP beam 0
::: AUTO_PLOT Deb/AP2 rev prot
::: ACKNOWLEDGE
::: ACKNOWLEDGE
```

We can now circulate beam in th

e. De-tune the DRF1 Rotator Cavities

Asdf

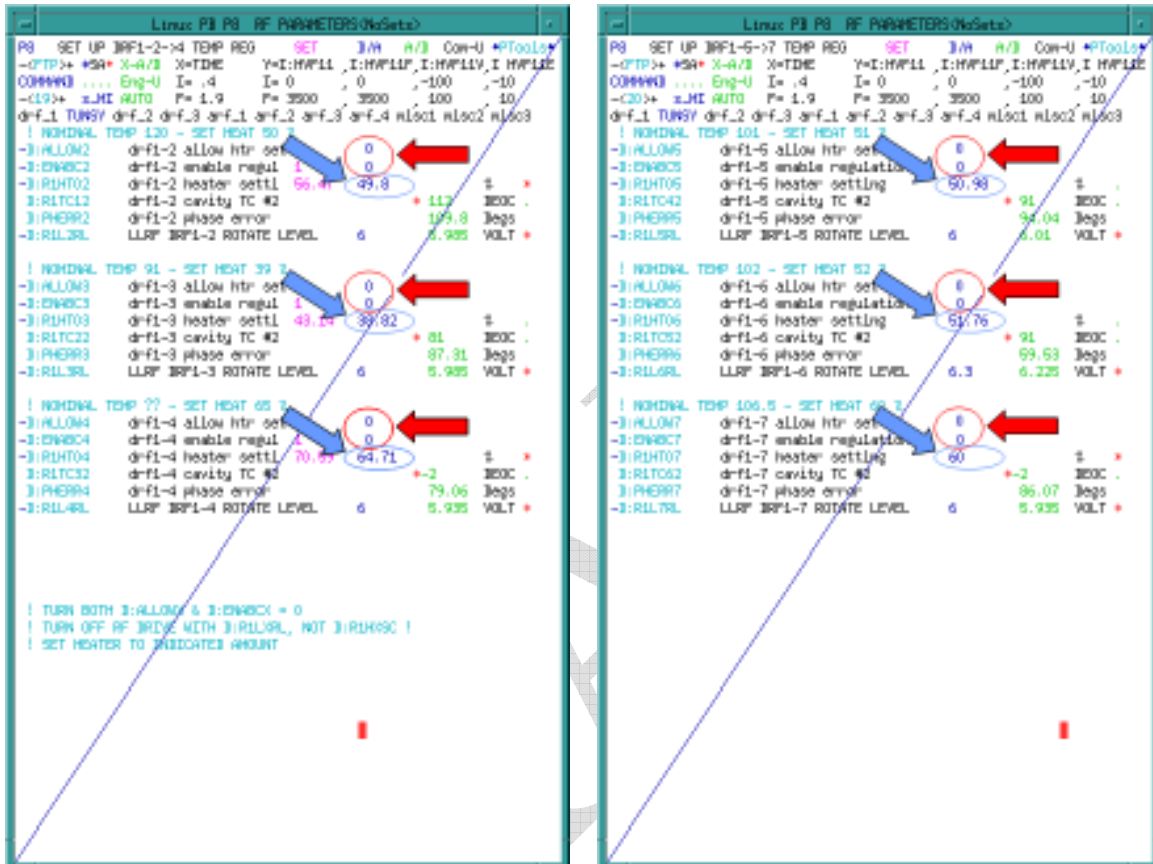


Figure 3-28:

4. Circulating Beam in the Debuncher

a. \$16/\$2D in the TLG

b. One Shots

We issue the last five commands of the aggregate and then start from the top.

```

::: CHECK_DEVICE D:HT609S RESTORE
::: CHECK_DEVICE D:HT606S RESTORE

```

Reverse Proton Setup Procedures

```
::: CHECK_DEVICE D:HT605S RESTORE
::: ACKNOWLEDGE
::: ACKNOWLEDGE
```

With the last five commands run, we will go to the top of the same aggregate.

```
::: FTP Deb Rev Prot 0
::: CTL_DEVICE A:EKIK ON
::: CTL_DEVICE A:ISEP1V ON
::: CTL_DEVICE A:ISEP2V ON
::: CTL_DEVICE A:IKIK ON
::: CTL_DEVICE D:ESEPV ON
::: CTL_DEVICE D:EKIK ON
::: CHECK_DEVICE D:HT609S SAVE_SET
::: CHECK_DEVICE D:HT606S SAVE_SET
::: CHECK_DEVICE D:HT605S SAVE_SET
:::
:::
::: BEAM_SWITCH Pbar_Source On
::: START_PGM D47
::: ACKNOWLEDGE
::: LOAD_TLG 75 ONESHOT
::: ACKNOWLEDGE
::: BEAM_SWITCH PBAR_SOURCE OFF
:::
::: CTL_DEVICE A:EKIK OFF
::: CTL_DEVICE A:ISEP1V OFF
::: CTL_DEVICE A:IKIK OFF
::: CTL_DEVICE D:ESEPV OFF
::: CTL_DEVICE D:EKIK OFF
::: SETIT_DEVICE D:HT609S =0
::: SETIT_DEVICE D:HT606S =0
::: SETIT_DEVICE D:HT605S =0
:::
::: ACKNOWLEDGE
```

5. Debuncher Orbits

a. Java Orbit Preparation

asdfasfa

b. Java BPM Orbits

asdfasdfa

6. Debuncher Admittance Measurement

a. Pbar Sequencer: Deb Hor aperture scan rev p

We issue the last five commands of the aggregate and then start from the top.

```
::: CHECK_DEVICE D:HT609S RESTORE
::: CHECK_DEVICE D:HT606S RESTORE
::: CHECK_DEVICE D:HT605S RESTORE
::: ACKNOWLEDGE
::: ACKNOWLEDGE
```

With the last five commands run, we will go to the top of the same aggregate.

```
::: FTP Deb Rev Prot 0
::: CTL_DEVICE A:EKIK ON
::: CTL_DEVICE A:ISEP1V ON
::: CTL_DEVICE A:ISEP2V ON
::: CTL_DEVICE A:IKIK ON
::: CTL_DEVICE D:ESEPV ON
::: CTL_DEVICE D:EKIK ON
::: CHECK_DEVICE D:HT609S SAVE_SET
::: CHECK_DEVICE D:HT606S SAVE_SET
::: CHECK_DEVICE D:HT605S SAVE_SET
:::
:::
::: BEAM_SWITCH Pbar_Source On
::: START_PGM D47
::: ACKNOWLEDGE
::: LOAD_TLG 75 ONESHOT
::: ACKNOWLEDGE
::: BEAM_SWITCH PBAR_SOURCE OFF
:::
::: CTL_DEVICE A:EKIK OFF
::: CTL_DEVICE A:ISEP1V OFF
::: CTL_DEVICE A:IKIK OFF
::: CTL_DEVICE D:ESEPV OFF
::: CTL_DEVICE D:EKIK OFF
::: SETIT_DEVICE D:HT609S =0
```

Reverse Proton Setup Procedures

```
::: SETIT_DEVICE D:HT606S =0
::: SETIT_DEVICE D:HT605S =0
:::
::: ACKNOWLEDGE
::: SPECTRUM_LOAD 4 25
::: FTP Deb Horz 0
:::
::: REPLAY P60 d;rj306 to edge
::: ACKNOWLEDGE
::: CTLIT_DEVICE D:DPENI OFF
::: CTLIT_DEVICE D:DPENI POSITIVE
::: ACKNOWLEDGE
::: CHECK_DEVICE D:DPHATT SAVE_SET
::: SET_DEVICE D:DPHATT = 0.75
::: ACKNOWLEDGE
::: CHECK_DEVICE D:DPHATT RESTORE
::: CTLIT_DEVICE D:DPENI NEGATIVE
::: CTLIT_DEVICE D:DPENI ON
::: CTL_DEVICE D:LM30CL ON
:::
::: FTP Deb 0
::: ACKNOWLEDGE
::: ACKNOWLEDGE
::: CTL_DEVICE D:LM30CL OFF
::: REPLACE P60 Deb Horz scrape
::: ACKNOWLEDGE
::: COPY_SCREEN 0 SB
::: COPY_SCREEN 0 SB
:::
::: REPLAY p60 d;rj306 retract
::: WAIT_DEVICE D:RJ306
::: CTL_DEVICE D:LM30CL ON
::: CHECK_DEVICE D:HT609S RESTORE
::: CHECK_DEVICE D:HT606S RESTORE
::: CHECK_DEVICE D:HT605S RESTORE
::: ACKNOWLEDGE
::: ACKNOWLEDGE
```

b. Pbar Sequencer: Deb Vert aperture scan rev p

We issue the last five commands of the aggregate and then start from the top.

```
::: CHECK_DEVICE D:HT609S RESTORE
::: CHECK_DEVICE D:HT606S RESTORE
```

Reverse Proton Setup Procedures

```
::: CHECK_DEVICE D:HT605S RESTORE
::: ACKNOWLEDGE
::: ACKNOWLEDGE
```

With the last five commands run, we will go to the top of the same aggregate.

```
::: FTP Deb Rev Prot 0
::: CTL_DEVICE A:EKIK ON
::: CTL_DEVICE A:ISEP1V ON
::: CTL_DEVICE A:ISEP2V ON
::: CTL_DEVICE A:IKIK ON
::: CTL_DEVICE D:ESEPV ON
::: CTL_DEVICE D:EKIK ON
::: CHECK_DEVICE D:HT609S SAVE_SET
::: CHECK_DEVICE D:HT606S SAVE_SET
::: CHECK_DEVICE D:HT605S SAVE_SET
:::
:::
::: BEAM_SWITCH Pbar_Source On
::: START_PGM D47
::: ACKNOWLEDGE
::: LOAD_TLG 75 ONESHOT
::: ACKNOWLEDGE
::: BEAM_SWITCH PBAR_SOURCE OFF
:::
::: CTL_DEVICE A:EKIK OFF
::: CTL_DEVICE A:ISEP1V OFF
::: CTL_DEVICE A:IKIK OFF
::: CTL_DEVICE D:ESEPV OFF
::: CTL_DEVICE D:EKIK OFF
::: SETIT_DEVICE D:HT609S =0
::: SETIT_DEVICE D:HT606S =0
::: SETIT_DEVICE D:HT605S =0
:::
::: ACKNOWLEDGE
::: SPECTRUM_LOAD 4 25
::: SPECTRUM_LOAD 5 25
::: FTP Deb Horz 0
:::
:::
::: REPLAY P60 d;tj308 to edge
::: ACKNOWLEDGE
::: CTLIT_DEVICE D:DPENI OFF
::: CTLIT_DEVICE D:DPENI POSITIVE
::: ACKNOWLEDGE
::: CHECK_DEVICE D:DPVATT SAVE_SET
```

```
::: SET_DEVICE D:DPVATT = 3.75
::: ACKNOWLEDGE
::: CHECK_DEVICE D:DPVATT RESTORE
::: CTLIT_DEVICE D:DPENI NEGATIVE
::: CTLIT_DEVICE D:DPENI ON
::: CTL_DEVICE D:LM30CL ON
::: TIMER A:VAREVT ENABLE
::: FTP Deb 0
::: ACKNOWLEDGE
::: ACKNOWLEDGE
::: CTL_DEVICE D:LM30CL OFF
::: REPLACE P60 Deb Vert Scan
::: ACKNOWLEDGE
::: COPY_SCREEN 0 SB
::: COPY_SCREEN 0 SB
:::
::: REPLAY p60 d;tj308 retract
::: WAIT_DEVICE D:TJ308
::: CTL_DEVICE D:LM30CL ON
::: CHECK_DEVICE D:HT609S RESTORE
::: CHECK_DEVICE D:HT606S RESTORE
::: CHECK_DEVICE D:HT605S RESTORE
::: ACKNOWLEDGE
::: ACKNOWLEDGE
```

c. FTP versus Lumberjack Manual Measurements

d. Java Fit of Lumberjack Data

7. Beam up AP2

a. Establishing beam up the AP2 line

```
::: ACKNOWLEDGE
:::
::: SETIT_DEVICE D:IKIKP =0
::: SETIT_DEVICE D:IKIK =64
::: CTLIT_DEVICE D:IKIKTG OFF
::: CTLIT_DEVICE D:IKIKRV ON
::: EVENT 82 ENABLE
::: EVENT 76 ENABLE
::: EVENT 87 ENABLE
::: WAIT_FOR EVENT 87
::: CTLIT_DEVICE D:IKIK ON
::: CTLIT_DEVICE D:ISEPV ON
```

```
::: ACKNOWLEDGE
::: CHECK_DEVICE A:SCRES RESTORE
::: CHECK_DEVICE D:IKIKP RESTORE
::: CTLIT_DEVICE D:IKIKRV OFF
::: CTLIT_DEVICE D:IKIKTG ON
::: CTL_DEVICE D:Q731 OFF
::: CTL_DEVICE A:EKIK OFF
::: CTL_DEVICE IKIK OFF
::: CTL_DEVICE A:ISEP1V OFF
::: CTL_DEVICE A:ISEP2V OFF
::: CTL_DEVICE D:EKIK OFF
::: CTL_DEVICE D:ESEPV OFF
::: SETIT_DEVICE D:IKIK =0
::: CHECK_DEVICE D:R1HT02 RESTORE
::: CHECK_DEVICE D:R1HT03 RESTORE
::: CHECK_DEVICE D:R1HT04 RESTORE
::: CHECK_DEVICE D:R1HT05 RESTORE
::: CHECK_DEVICE D:R1HT06 RESTORE
::: CHECK_DEVICE D:R1HT07 RESTORE
::: SET_SEQ FILE 91
::: ALARM_LIST PBAR 72
::: WAIT_FOR SECS 5
::: ALARM_LIST PBAR 76
::: ACKNOWLEDGE
```

b. Beam Modes

- i. **Partial Debuncher Turn to AP2**
- ii. **Circulating Debuncher beam to AP2**

8. D/A Orbit Studies

9. Return to Stacking